WD0150VDX

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please
register your product at

www.samsung.com/register

SAMSUNG

WD0150VDX-02535G-01_EN.indd 1 2011-02-14 7:41:41

features of your new VRT™ STEAM washer

- **VRT™ (Vibration Reduction Technology)**
  This Samsung washer performs smoothly at top spin speeds, minimizing noise and vibration.
- **The Largest Capacity**
  Samsung's extra-large capacity laundry machine can wash a full set of your bedding, a kingsize comforter, or up to 28 bath towels in a single load. Since you don't have to do as many loads, you save time, money, water and energy.
- **Diamond drum™**
  Take gentle care of your fabrics. With inside holes 36% smaller than those of conventional drums,the diamond drum prevents fabrics from sticking out and consequently being damaged.
- **Stylish design**
  The stylish design of this washer blends well with your environment.
- **LCD Display & Center jog dial**
  The Jog dial enables you to select cycles in both directions with ease, and the LCD display is easy to use and understand.
- **DD Motor**
  The power to handle anything! Our direct-drive inverter motor delivers power right to the washer tub from a variable speed, reversible motor. A beltless direct-drive motor generates a higher spin speed of 1,300rpms for more effective, quiet operation. The washer also has fewer moving parts, meaning fewer repairs.
- **Sanitize**
  When selecting this cycle, the water heats to an extra high temperature to remove 99.9% of certain bacteria typically found on clothing, bedding, or towels. This certification is conducted by NSF International, an independent third-party testing and certification organization. Please check garment care label to avoid garment damage. Only sanitizing cycles have been designed to meet the requirements of this protocol for sanitization efficacy.

NSF Protocol P172
Sanitization Performance of Residential and Commercial, Family-Sized Clothes Washers

- **Eco Drum Clean**
  Using Eco Drum Clean helps to maintain your washing machine with maximum hygiene. This feature has the option of using (or not using) drum cleaning chemical detergents, depending on your Eco/Performance preference – the cycle has been designed by Samsung to deliver results without chemical assistance. Keep your drum cleansed and odourless by using this specialised cleaning program which spins hot water (70ºC) in the drum, with the thorough cleansing cycle lasting for just under 90 minutes. This works to remove mould and bacteria present in the drum which could grow and lead to smells and discolouration if left alone. Works perfectly in support of Eco Bubble, allowing you to routinely wash your fabrics in cooler temperatures and occasionally cleanse your wash drum to maintain top hygiene levels.

WD0150VDX-02535G-01_EN.indd Sec1:2 2011-02-14 7:41:53

- **Air Wash - Sterilization and Deodorization without Water!**

  Refresh your favorite clothing simply by using air after you've been at a party or have gone out (food, cigarettes). Non-stained clothing no longer needs to be washed, simply refresh them using the 4 available cycles for different fabrics.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 37 tells you what to do if something goes wrong with your new washing machine.

WD0150VDX-02535G-01_EN.indd Sec1:3 2011-02-14 7:41:54

safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.
Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
⚠ **CAUTION**	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WD0150VDX-02535G-01_EN.indd Sec2:4 2011-02-14 7:41:54

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

WD0150VDX-02535G-01_EN.indd Sec2:5 2011-02-14 7:41:56

safety information

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220-240V / 50Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature
- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WD0150VDX-02535G-01_EN.indd Sec2:6 2011-02-14 7:41:56

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, Turn off the water & power supply immediately and contact your nearest service centre.

- Do not Touch the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WD0150VDX-02535G-01_EN.indd Sec2:7 2011-02-14 7:41:57

safety information

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

---

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WD0150VDX-02535G-01_EN.indd Sec2:8 2011-02-14 7:41:57

CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.
Open the Water Tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).

- If the door is not closed completely, it may result in water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

WD0150VDX-02535G-01_EN.indd Sec2:9 2011-02-14 7:41:59

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.
- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.
- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.
- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.
- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.
- This may result in burns.

Do not insert your hand into the detergent box after opening it.
- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.
- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.
- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.
- This may result in problems with the washer.

WD0150VDX-02535G-01_EN.indd Sec2:10 2011-02-14 7:41:59

Do not use natural hand-washing soap for the washer.
- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.
- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.
- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

Lint must not to be allowed to accumulate around the tumble dryer.

Do Not Dry Unwashed Items In The Tumble Dryer.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

That the appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer.

WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

WD0150VDX-02535G-01_EN.indd Sec2:11 2011-02-14 7:41:59

contents

SETTING UP YOUR WASHING MACHINE 13

13 Checking the parts
14 Meeting installation requirements
14 Electrical supply and grounding
14 Water Supply
15 Drain
15 Flooring
15 Surrounding temperature
15 Alcove or closet installation
15 Installing your washing machine

WASHING A LOAD OF LAUNDRY 21

21 Washing for the first time
21 Basic instructions
22 Using the control panel
25 Child lock
25 Sound off
26 Delay end
26 Stop&Add
27 Eco Bubble
28 Air Wash
29 Using dry course
30 Washing clothes using the cycle selector
31 Washing clothes manually
31 Laundry guidelines
33 Detergent and additives information
33 Which detergent to use
33 Detergent drawer

CLEANING AND MAINTAINING YOUR WASHING MACHINE 34

34 Cleaning the exterior
34 Cleaning the interior
34 Cleaning the dispensers
35 Storing your washer
35 Cleaning the debris filter
36 Cleaning the door seal/bellow
36 Preserving the top cover and the front frame

TROUBLESHOOTING AND INFORMATION CODES 37

37 Check these points if your washing machine...
39 Information codes

CYCLE CHART 40

40 Cycle chart

APPENDIX 41

41 Fabric care chart
41 Protecting the environment
41 Declaration of conformity
42 Specifications

WD0150VDX-02535G-01_EN.indd Sec4:12 2011-02-14 7:42:00

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

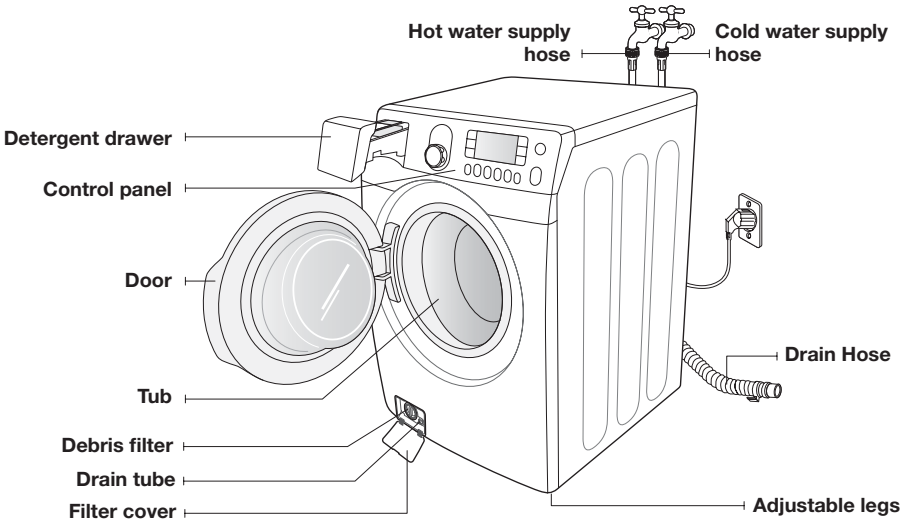

Spanner

Bolt hole covers



Water supply hose

Hose guide



Plastic Zip Hose Tie

WD0150VDX-02535G-01_EN.indd Sec9:13 2011-02-14 7:42:00

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- AC 220-240V / 50Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 137 kPa ~ 800 kPa. Water pressure less than 137 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WD0150VDX-02535G-01_EN.indd Sec9:14 2011-02-14 7:42:01

Drain

Samsung recommends a standpipe height of 46cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 102 mm
Top – 432 mm	Front – 51 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 cm^2 unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WD0150VDX-02535G-01_EN.indd Sec9:15 2011-02-14 7:42:02

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

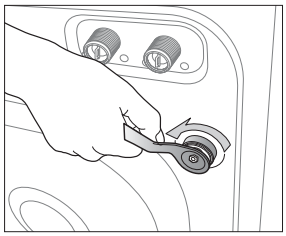

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

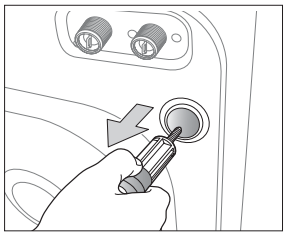

3. Fill the holes with the supplied plastic covers.

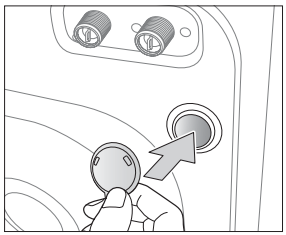

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WD0150VDX-02535G-01_EN.indd Sec9:16 2011-02-14 7:42:02

STEP 3
Adjusting the Levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the levelling feet in and out as necessary by hand.

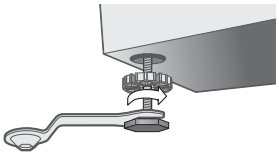

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

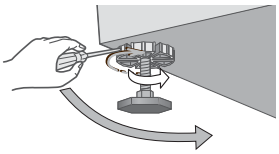

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

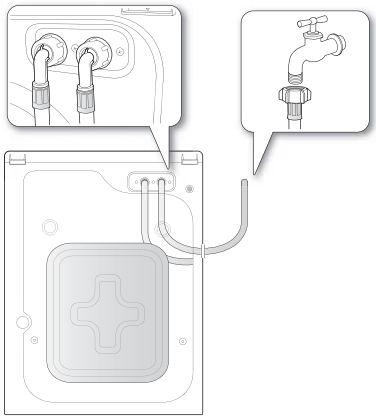

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WD0150VDX-02535G-01_EN.indd Sec9:17 2011-02-14 7:42:03

setting up your washing machine

Connecting the water supply hose

1. Remove the adaptor from the water supply hose.

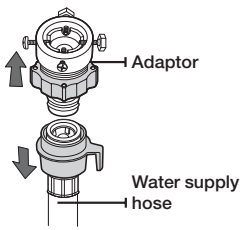

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.



3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

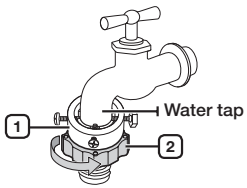

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

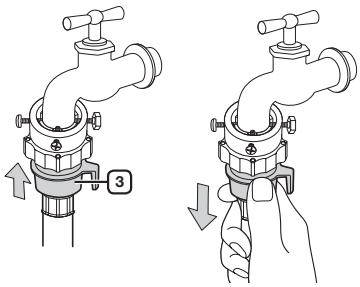

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

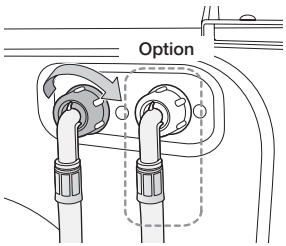

WD0150VDX-02535G-01_EN.indd Sec9:18 2011-02-14 7:42:04

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

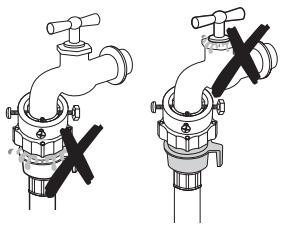

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

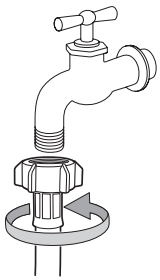

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

WD0150VDX-02535G-01_EN.indd Sec9:19 2011-02-14 7:42:05

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

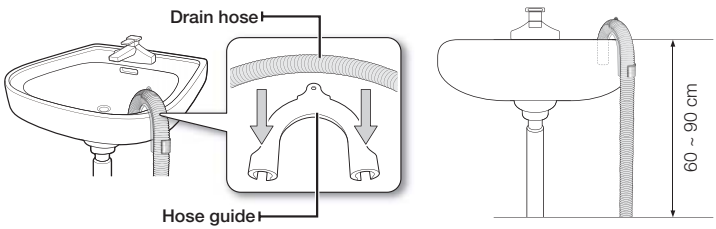

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240V / 50Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)

WD0150VDX-02535G-01_EN.indd Sec9:20 2011-02-14 7:42:06

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

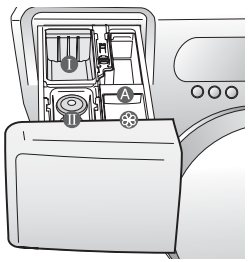

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

To use liquid detergent, use the liquid detergent box (refer to page 33 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 31-32.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
- Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
- Do not wash water-proofed items in normal cycle except outdoor care program.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WD0150VDX-02535G-01_EN.indd Sec5:21 2011-02-14 7:42:07

washing a load of laundry

USING THE CONTROL PANEL

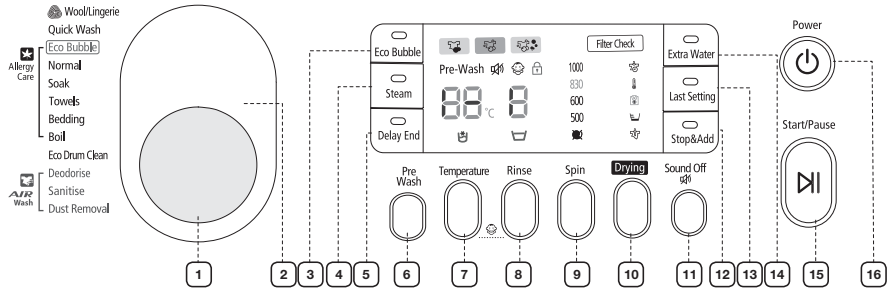

1 CYCLE SELECTOR

Select the tumble pattern and spin speed for the cycle.

For detailed information, refer to “Washing clothes using the cycle selector”. (see page 30)

Wool/Lingerie - This is the course for lingerie or clothing made from wool. For machine-washable wool.

- The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem.
- Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers.

WOOLMARK

The wool wash cycle of this machine has been approved by Woolmark for the washing of machine washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0509.

Quick Wash - For lightly soiled garments needed quickly.
Normal - For most fabrics including cottons, linens, and normally soiled garments.
Soak - This is the course that completely removes dirt from laundry using the soak function.
Towels - For bath towels, washcloths and mats.
Bedding - For bulky items such as blankets and sheets. When you are washing comforters, use liquid detergent.
Boil - This course is appropriate to wash underwear we change everyday, strong dirt removal and sterilization is performed simultaneously.
Eco Drum Clean - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed.
Air Wash - This course is useful for removing bad odors. Turning the Cycle Selector cycles through the following operating modes. (Deodorize → Sanitize → Dust Removal)

- Deodorize - Reduces bad smells from the laundry
- Sanitize - Deodorize and sanitize the laundry by stronger air wash action with higher temp.
- Dust Removal - To sterilize the laundry for a longer period of time, select this function.

WD0150VDX-02535G-01_EN.indd Sec5:22 2011-02-14 7:42:09

2 **LCD DISPLAY**	The large LCD Display is easy to use. It provides instructions and diagnostics while keeping you updated on the cycle status and time remaining.
3 **ECO BUBBLE SELECTION BUTTON**	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. • Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). • Other wash cycles do not need this option and automatically turn the Generator OFF. • On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 27 for more information).
4 **STEAM SELECTION BUTTON**	Press this button to use steam. Steam Care is available with Quick Wash, Normal, Soak, Towels, Bedding, Boil cycles. For heavily soiled, colorfast garments. Steam care improves stain treatment and use less water of each cycle.
5 **DELAY END SELECTION BUTTON**	Any cycle can be delayed for up to 24 hours in one-hour increments. Displayed hour indicates the time at which the wash will be started.
6 **PRE WASH SELECTION BUTTON**	To use this feature add detergent to the Pre Wash section of the detergent compartment. When turned on, the washer fills with cold water and detergent, tumbles, then drains and advances to the selected wash cycle. Some cycles cannot be selected with this option.* * You cannot select the PreWash option in the, Wool and Quick Wash cycles.
7 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water , 30 ℃, 40 ℃, 60 ℃ and 95 ℃).
8 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
9 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. "No spin ⊗" - The laundry remains in the drum and no spin cycle is performed after the final drain.
10 **DRYING BUTTON**	Pressing the button cycles through the following options. Cup Board → Small → Shirt → Low Temp → Time Dry (30min. →1:00 h → 1:30 h → 2:00 h → 2:30 h) → Cup Board **Cup Board** - Select to dry laundry automatically by detecting the amount and weight of the laundry. Select this to dry cotton clothing such as cotton trousers, T-shirts, and cotton underwear. **Small** - Select this course to dry a small amount of laundry (approximately 400g). (3~4 towels, a pair of pants (school uniform) or 2 long-sleeve shirts.) **Shirt** - Select this course to dry a shirt or a jacket (school uniform) in a short time (19 minutes). **Low Temp** - Dry clothing which may become deformed at high temperatures at a low temperature. (Mixed fabrics and synthetic fibers such as polyester and nylon.) **Time Dry** - Dry the laundry for the specified period of time. • You must avoid washing laundry that may not be dried as it may be deformed even at low temperatures. • The Normal, Extra, Iron and Light Dry options detect the weight of the laundry in order to display an accurate drying time and dry them more completely. • The drying conditions may differ depending on the type and the amount of laundry.

WD0150VDX-02535G-01_EN.indd Sec5:23 2011-02-14 7:42:10

washing a load of laundry

11 **SOUND OFF SELECTION BUTTON**	Press the button to increase or decrease the end of cycle signal volume or turn off the signal.
12 **STOP&ADD SELECTION BUTTON**	Select this to add the laundry amid the process (See “Stop&Add” on page).
13 **LAST SETTING BUTTON**	Choose your favorite cycle including temperature, spin, option, etc.
14 **EXTRA WATER BUTTON**	If you press the Extra Water button, water is added before the rinse course and the rinse course is performed with more water. To cancel the function, press the button again. The light is turned off and the function is canceled.
15 **START/PAUSE SELECTION BUTTON**	Press to pause and restart programs.
16 **POWER BUTTON**	Press once to turn your washer on, press again to turn your washer off. If the washer is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WD0150VDX-02535G-01_EN.indd Sec5:24 2011-02-14 7:42:12

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

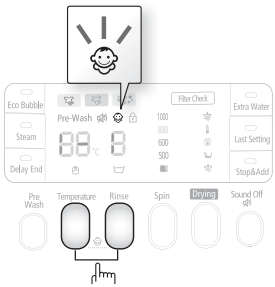

3 SEC.

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Option** buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

WD0150VDX-02535G-01_EN.indd Sec5:25 2011-02-14 7:42:13

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of max 24 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

Stop&Add

When the washing machine is working, the door is locked, and the "Stop&Add" lamp is off, you will not be able to add laundry. You can only add laundry when the Stop&Add lamp is illuminated.

1. Press the Stop&Add button.
   The washing machine will automatically pause.
2. Wait about 30 seconds and check the state of "Stop&Add" lamp.
   - Blinking: The water in the washing machine is drained down to the safety level for the additional laundry to be added.
   - Off: Adding laundry is possible.
3. Add the laundry.
4. Press the Start/Pause button.

- Avoid adding laundry when the machine has foamed up or is filled with water. Otherwise, the foam or water may leak from the door. Check before opening the door.
- We recommend that you select the Stop&Add function 5 minutes before a cycle is performed.
- If the internal temperature is higher than 55 ˚C during the wash cycle or 70 ˚C during the drying cycle, the Stop&Add function cannot be selected.

WARNING
- Do not open the door by force as it may result in injury or damage the washer.

WD0150VDX-02535G-01_EN.indd Sec5:26 2011-02-14 7:42:14

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

Course	Bubble function	Canceling the bubble function
Normal, Soak, Towels, Bedding, Boil	Available	Available
Wool/Lingerie. Quick Wash, Eco Drum Clean		Not available

- A different bubble function may be applied depending the course.

Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power** button.
3. Select a function.
4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.
   - Add the appropriate amount of detergent into the detergent compartment Ⅱ, and add the fabric softener to softener compartment ❀ just under the fiber softener base line (MAX) of “A”)
   - When the Prewash course is selected, add detergent into the prewash compartment Ⅰ as well.
   - To use liquid detergent, leave the liquid detergent box in the drawer(refer to “Liquid Detergent” section on page 33).

Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
   - Press the **Start/Pause** button to start the wash.
   - The amount of the laundry is automatically detected and the laundry is washed.
   - Once a washing machine operation begins, you cannot add or select the bubble function.

- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

WD0150VDX-02535G-01_EN.indd Sec5:27 2011-02-14 7:42:15

Air Wash

Air Wash can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton jumpers, sweaters and suits. [Two items or less (less than 1 kg)]

1. Open the door, place the laundry into the washing machine and close the door.
2. Press the **Power** button.
3. Select **Air Wash** by turning the **Cycle Selector**.

MODE	CYCLE TIME
Deodorize	26 min
Sanitize	35 min
Dust Removal	40 min

- When one of these options has been selected, no other button can be selected and you can only select the delay end time from between 24:00.

4. Close the door and press the **Start/Pause** button.

- When there is water in the tub, **Air Wash** cannot be worked. Drain the water and select **Air Wash**.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with Air Wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).

Avoid Air Wash the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow

WD0150VDX-02535G-01_EN.indd Sec5:28 2011-02-14 7:42:16

USING DRY COURSE

Refer to the label of drying capacity and be sure to put in the clothes to the lower level than the marked line for the dried clothes of 5.0kg.

1. Open the door, put in the clothes and close the door again.
2. Press the **Power** button and then press the **Drying** button.
   : The standard course will be selected automatically.
   Drying is not available for Eco Drum Clean, Air Wash and Wool courses.
3. Select **Drying** button as follows.
   Drying Programs

   - Every press of this button will select drying type repeatedly in the following order: Cup Board → Small → Shirt → Low Temp → Time Dry (30 min. → 60 min. → 90 min. → 120 min. → 150 min.) → Cup Board

Drying Type		Information	Max Load	Time (Max Load)
Auto Drying	Cupboard( )	Standard: Dries the laundry.	5.0 kg	240 min.
	Small( )	Dries 3~4 towels or 2 shirts	0.8 kg	40 min.
	Shirt( )	Dries one shirt	0.3 kg	20 min.
	Low Temp.( )	Dries the laundry at a low temperature to protect the texture of the laundry.	5.0 kg	270 min.
Time Drying( )		You can select the appropriate drying time depending on the texture, quantity, and moisture.	-	30/60/90/ 120/150 min.

- It automatically displays Drying Time by sensing the weight of clothes before drying for increasing the drying effect.
- **For laundry weighing less than 5.0kg, use the Auto Dry. For laundry that weighs more, please use the Time Dry.**
- If both the spin and drying cycles are selected, the spin speed is automatically selected to enhance the drying efficiency.
- When using the drying cycle, check if the water supply valve is opened.

4. Put suitable amount of detergent and fiber softener in the detergent tray and close it again.
5. Press **Start/Pause** button.
   : It automatically performs an optimal function from washing to drying.
   - The selected course can't be altered after the start of drying.
   - If cold water is not supplied, drying will not be performed.
   - In case you wish to dry after hand washing, select both Spin and Dry at the same time.

WD0150VDX-02535G-01_EN.indd Sec5:29 2011-02-14 7:42:16

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles of clothing one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Eco Bubble, Normal, Soak, Towels, Bedding and Boil cycles. It is only necessary if your clothing is heavily soiled.

7. Use the Cycle Selector to select the appropriate cycle according to the type of material: Eco Bubble, Normal, Soak, Towels, Bedding and Boil . The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the number of rinse cycles, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the Start/Pause button on the Cycle Selector and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

1. Within 5 minutes of starting a wash, it is possible to add/remove laundry items to the wash.
2. Press the Start/Pause button to unlock the door.
3. The door cannot be opened when the water is too HOT or the water level is too HIGH.
4. After closing the door, press the Start/Pause button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WD0150VDX-02535G-01_EN.indd Sec5:30 2011-02-14 7:42:19

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ℃, 40 ℃, 60 ℃, 95 ℃)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.(⊗ : No Spin)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.
Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.
Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

WD0150VDX-02535G-01_EN.indd Sec5:31 2011-02-14 7:42:19

washing a load of laundry

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WD0150
Normal **- average/lightly soiled** **- heavily soiled**	17.0 kg
Towels	5.0 kg
Bedding	3.5 kg
Wool/Lingerie	4.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvet cover, the wash time may be lengthened or the spin efficiency may be degraded.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

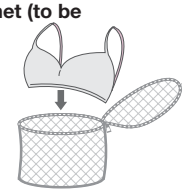

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

WD0150VDX-02535G-01_EN.indd Sec5:32 2011-02-14 7:42:20

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required. DO NOT exceed the MAX FILL (Ⓐ) line.
4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

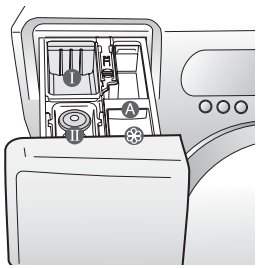

When washing large items do NOT use the following detergetnt types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).

WD0150VDX-02535G-01_EN.indd Sec5:33 2011-02-14 7:42:20

cleaning and maintaining your washing machine

CLEANING THE EXTERIOR

Turn off the water faucets after finishing the day's washing.
This will shut off the water supply to your Washer and prevent the unlikely possibility of damage from escaping water. Leave the door open to allow the inside of your Washer to dry out.
Use a soft cloth to wipe up all detergent, bleach or other spills as they occur.
Clean the following as recommended:
Control Panel – Clean with a soft, damp cloth. Do not use abrasive powders or cleaning pads. Do not spray cleaners directly on the panel.
Cabinet – Clean with soap and water.

CLEANING THE INTERIOR

Clean the interior of your Washer periodically to remove any dirt, soil, odor, mold, mildew, or bacterial residue that may remain in your Washer as a result of washing clothes.
Failure to follow these instructions may result in unpleasant conditions, including odors and/or permanent stains on your Washer or laundry.
Hard water deposits may be removed, if needed. Use a cleaner labeled "Washer safe".

CLEANING THE DISPENSERS

The automatic dispenser may need to be cleaned periodically due to laundry additive buildup.

1. Pull out the detergent liquid from detergent compartment.
2. Remove the siphon cap from the fabric softener and bleach compartments.
3. Wash all of the parts under running water.
4. Clean the dispenser recess with a soft brush.
5. Reinsert the siphon cap and push it firmly into place.
6. Push the dispenser back into place.
7. Run a Rinse+Spin cycle without any load in your washer.

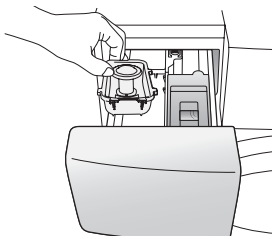

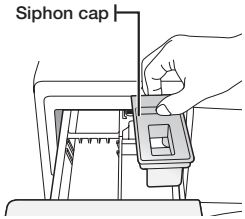

WD0150VDX-02535G-01_EN.indd Sec6:34 2011-02-14 7:42:22

STORING YOUR WASHER

Washers can be damaged if water is not removed from hoses and internal components before storage. Prepare your Washer for storage as follows:

- Select the Quick Wash cycle and add bleach to the automatic dispenser. Run your Washer through the cycle without a load.
- Turn the water faucets off and disconnect the inlet hoses.
- Unplug your Washer from the electrical outlet and leave your Washer door open to let air circulate inside the tumbler.
- If your Washer has been stored in below–freezing temperatures, allow time for any leftover water in your Washer to thaw out before use.

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter when water does not drain well or the “ND” error message is displayed.

1. Open the filter cover by pressing and pulling the handle of the filter cover with your finger.

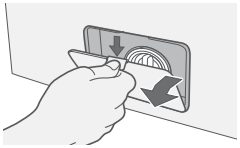

2. Unscrew the drain cap by turning it counterclockwise.
3. Hold the cap on the end of the drain tube and slowly pull it out about 6 inches (15 cm) and drain off all the water.

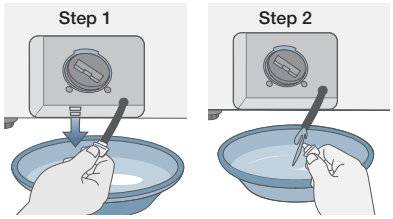

4. Remove the debris filter cap.

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

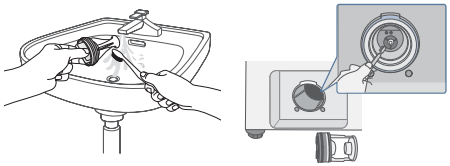

WD0150VDX-02535G-01_EN.indd Sec6:35 2011-02-14 7:42:22

cleaning and maintaining your washing machine

CLEANING THE DOOR SEAL/BELLOW

1. Open the washer door and remove any clothing or items from the washer.
2. Inspect the gray colored seal/bellow between the door opening and the basket for stained areas. Pull back the seal/bellow to inspect all areas under the seal/bellow and to check for foreign objects.

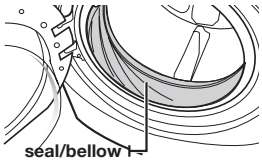

3. If stained areas are found, wipe down these areas of the seal/bellow, using the procedure that follows.
   - **a)** Mix a dilute solution, using ¾ cup (177 mL) of liquid chlorine bleach, and 1 gal. (3.8 L) of warm tap water.
   - **b)** Wipe the seal/bellow area with the dilute solution, using a damp cloth.
   - **c)** Let stand 5 minutes.
   - **d)** Wipe down area thoroughly with a dry cloth and let the washer interior air dry with door open.

IMPORTANT:
- Wear rubber gloves when cleaning for prolonged periods.
- Refer to the bleach manufacturer's instructions for proper use.

PRESERVING THE TOP COVER AND THE FRONT FRAME

Do not place any heavy or sharp objects or a detergent box on the washing machine. Keep them on the purchased pedestal or in a separate storage box. This may scratch or damage the top cover of the washing machine.

Since the entire washing machine has a high-gloss finish, the surface can be scratched or damaged. Therefore, avoid scratching or damaging the surface when using the washing machine.

WD0150VDX-02535G-01_EN.indd Sec6:36 2011-02-14 7:42:24

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start..	• Make sure the door is firmly closed. • Make sure your Washer is plugged in. • Make sure the water source faucets are open. • Make sure to press the Start/Pause Button to start your Washer. • Make sure the Child Lock is not activated; see page 25. • Before your Washer starts to fill, it will make a series of clicking noises to check the door lock and do a quick drain. • Check the fuse or reset the circuit breaker
Has no water or not enough water..	• Turn both faucets on fully. • Make sure the door is tightly closed. • Straighten the water inlet hoses. • Disconnect hoses and clean screens. Hose filter screens may be clogged. • Open and close the door, then press the Start/Pause Button.
Has detergent remains in the automatic dispenser after the wash cycle is complete.	• Make sure your Washer is running with sufficient water pressure. • Make sure the Detergent Selector dial is in the upper position when using granular detergent.
Vibrates or is too noisy.	• Make sure your Washer is set on a level surface. If the surface is not level, adjust your Washer feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your Washer is not touching any other object. • Make sure the laundry load is balanced.
Stops	• Plug the power cord into a live electrical outlet. • Check the fuse or reset the circuit breaker. • Close the door and press the Start/Pause Button to start your Washer. For your safety, your Washer will not tumble or spin unless the door is closed. • Before your Washer starts to fill, it will make a series of clicking noises to check the door lock and do a quick drain. • There may be a pause or soak period in the cycle. Wait briefly and it may start. • Check the screens on the inlet hoses at the faucets for obstructions. Clean the screens periodically.

WD0150VDX-02535G-01_EN.indd Sec11:37 2011-02-14 7:42:24

troubleshooting and information codes

PROBLEM	SOLUTION
Fills with the wrong temperature water.	• Turn both faucets on fully. • Make sure the temperature selection is correct. • Make sure the hoses are connected to the correct faucets. Flush water lines. • Check the water heater. It should be set to deliver a minimum 120° F (49° C) hot water at the tap. Also check the water heater capacity and recovery rate. • Disconnect the hoses and clean the screens. The hose filter screens may be plugged. • As your Washer is filling, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. • While your Washer is filling, you may notice just hot and/or just cold water going through the dispenser when cold or warm wash temperatures are selected. This is a normal function of the automatic temperature control feature as your Washer determines the temperature of the water.
Door locked or will not open.	• Press the Start/Pause Button to stop your Washer. • Your Washer door will remain locked during the heating portion of the Sanitize Cycle • It may take a few moments for the door lock mechanism to disengage.
Does not drain and/or spin.	• Check the fuse or reset the circuit breaker. • Straighten the drain hoses. Eliminate kinked hoses. If there is a drain restriction, call for service. • Close the door and press the Start/Pause Button. For your safety, your Washer will not tumble or spin unless the door is closed. • Make sure the debris filter is not clogged.
Load is too wet at the end of the cycle.	• Use the High or Extra High spin speed. • Use high efficiency detergent to reduce over–sudsing. • Load is too small. Very small loads (one or two items) may become unbalanced and not spin out completely.
Leaks water.	• Make sure the door is firmly closed. • Make sure all hose connections are tight. • Make sure the end of the drain hose is correctly inserted and secured to the drainage system. • Avoid overloading. • Use high efficiency detergent to prevent over–sudsing.
Has excessive suds.	• Use high efficiency detergent to prevent over-sudsing. • Reduce the detergent amount for soft water, small or lightly soiled loads. • Non-HE detergent is NOT recommended.

If the problem persists, contact your local Samsung Customer Service.

WD0150VDX-02535G-01_EN.indd Sec11:38 2011-02-14 7:42:24

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Hot	• It appears when the internal temperature of the drum is high. The fan will automatically function, so just wait until "Hot" indication disappeared.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

WD0150VDX-02535G-01_EN.indd Sec11:39 2011-02-14 7:42:24

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Temp. (℃)					Bubble				Spin Speed(MAX) rpm				
	Cold	30	40	60	95	No Bubble	Normal	Power	Turbo	No Spin	500	600	830	1000
Quick Wash	●	●	●						●	●	●	●	●	●
Normal	●	●	●	●		●	●	●	●	●	●	●	●	●
Soak	●	●	●	●		●	●	●	●	●	●	●	●	●
Wool/Lingerie	●	●	●						●	●	●	●		
Towels	●	●	●	●	●	●	●	●	●	●	●	●	●	
Bedding	●	●	●			●			●	●	●	●	●	
Boil					●	●			●	●	●	●	●	●
Eco Drum Clean			●			●					●			

PROGRAM	Drying	Pre Wash	Steam	Delay End	Stop&Add	Display time (min)
Quick Wash	●		●	●	●	0:48
Normal	●	●	●	●	●	1:09
Soak	●	●	●	●	●	1:38
Wool/Lingerie			●	●	●	0:46
Towels	●	●	●	●	●	1:58
Bedding		●	●	●	●	2:03
Boil	●	●	●	●	●	2:18
Eco Drum Clean			●	●		1:48

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.

WD0150VDX-02535G-01_EN.indd Sec7:40 2011-02-14 7:42:24

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundery problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WD0150VDX-02535G-01_EN.indd Sec3:41 2011-02-14 7:42:25

appendix

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WD0150	
			W686mm X D811mm X H991mm	
WATER PRESSURE			137 kPa ~ 800 kPa	
WATER VOLUME			56 ℓ	
NET WEIGHT			WD0150	
			107 kg	
WASH AND SPIN CAPACITY			17.0 kg [DRY LAUNDRY]	
DRY CAPACITY			9.0 kg	
POWER CONSUMPTION	MODEL		WD0150	
	WASHING		220 V	250 W
	WASH AND HEATING		220 V	2200 W
	DRYING		220V	2200W
	SPIN	MODEL	WD0150	
		220V	600 W	
	PUMPING		80 W	
PACKAGE WEIGHT	MODEL		WD0150	
	PAPER		5.0 kg	
	PLASTIC		1.8 kg	
SPIN REVOLUTIONS	MODEL		WD0150	
	rpm		1000	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WD0150VDX-02535G-01_EN.indd Sec3:42 2011-02-14 7:42:31

memo

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

Code No. DC68-02535G-01_EN

WD0150VDX-02535G-01_EN.indd Sec3:44 2011-02-14 7:42:31

WD0150VDX

غسالة ملابس

دليل المستخدم

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً، الرجاء تسجيل المنتج على الموقع

www.samsung.com/register

SAMSUNG

Planet First 100% Recycled Paper

WD0150VDX-02535G-01_AR.indd 1 2/14/2011 7:22:37 PM

ميزات الغسالة VRT™ STEAM الجديدة

- **VRT™ (تقنية تقليل الاهتزازات)**

تعمل غسالة Samsung بهدوء عند سرعات التنشيف القصوى، مما يعمل على الحد من صدور ضوضاء أو حدوث اهتزازات.

- **السعة الأكبر**

يمكن لغسالة ملابس Samsung ذات السعة الأكبر غسل مجموعة كاملة من المفروشات أو لحاف من الحجم الكبير، أو حتى ٢٨ منشفة حمام في مرة واحدة. ومن ثمّ، لا تكون مضطرًا للغسيل مرات متعددة، فضلاً عن توفير الوقت والمال والماء والطاقة.

- **الحاوية الماسية (Diamond drum™)**

تعتني هذه الغسالة بالأقمشة جيدًا؛ حيث إن الحاوية الماسية بها ذات فتحات داخلية أصغر بنسبة ٣٦٪ من الحاويات التقليدية، فإنها تحول دون تمدد الأقمشة، ومن ثمّ تعرّضها للتلف.

- **التصميم الأنيق**

ينسجم التصميم الأنيق لهذه الغسالة مع عالمك الخاص.

- **شاشة عرض LCD وقرص تغيير برامج مركزي**

يتيح لك قرص تغيير البرامج تحديد الدورات في كلا الاتجاهين بسهولة، كما أن شاشة LCD سهلة الاستخدام وبسيرة الفهم.

- **محرك التشغيل المباشر**

القدرة على غسل أي شئ! يعمل محرك التشغيل العكسي المباشر على توصيل الطاقة مباشرةً إلى حوض الغسل من محرك عكوس دوران ذي سرعات متغيرة، وتصل سرعة تنشيف محرك التشغيل المباشر الذي لا يحتوي على سير إلى ١٣٠٠ لفة في الدقيقة للحصول على تشغيل أكثر كفاءة وهدوءًا، كما تحتوي الغسالة على أجزاء متحركة أقل، مما يعني إصلاحات أقل.

- **التعقيم**

عند اختيار هذه الدورة، يتم تسخين الماء إلى درجة حرارة عالية للغاية لإزالة ٩٩,٩ من بكتيريا معينة توجد عادةً على الملابس والمفروشات والمناشف، وذلك بشهادة هيئة NSF International؛ وهي هيئة اختبار وتصديق خارجية مستقلة.
الرجاء التحقق من ملصق العناية بالملابس لتجنّب تعرّضها للتلف، تم تصميم دورات التعقيم فقط للوفاء بمتطلبات هذا البروتوكول لضمان فعالية التعقيم.

NSF Protocol P172
أداء التعقيم لغسالات الملابس المنزلية والتجارية ذات الحجم العائلي.

- **برنامج تنظيف الحاوية صديق البيئة**

يساعد استخدام "برنامج تنظيف الحاوية صديق البيئة" على الحفاظ على أعلى مستويات النظافة بالغسالة، وتتضمن هذه الميزة إمكانية استخدام مواد كيميائية لتنظيف الحاوية أو عدم استخدامها، وذلك بناءً على نظام الأداء/النظام البيئي المفضل، علمًا بأنه قد تصميم هذه الدورة بواسطة Samsung لتوفير نتائج فعّالة دون استخدام مواد كيميائية. حافظ على نظافة الحاوية ومن خلوها من أي روائح باستخدام برنامج النظافة المخصص، والذي يقوم بتدوير الماء الساخن (٧٠ درجة مئوية) داخل الحاوية بواسطة دورة التنظيف الشاملة التي تستمر لأقل من ٩٠ دقيقة. ويعمل ذلك على إزالة الأوساخ والبكتيريا الموجودة بالحاوية، والتي قد تنمو مما يتسبب في انبعاث روائح وتغيّر اللون إذا لم يتم تنظيفها، كما يعمل هذا البرنامج بشكل مثالي مع Eco Bubble (الفقاعات صديقة البيئة)، مما يسمح لك بغسل المنسوجات بصورة منتظمة بدرجة حرارة أقل وتنظيف حاوية الغسل من وقت لآخر للحفاظ على أقصى مستويات النظافة.

WD0150VDX-02535G-01_AR.indd Sec1:2 2/14/2011 7:22:46 PM

- **الغسيل بالهواء ــ التعقيم وإزالة الروائح الكريهة دون استخدام الماء!**

نظّف ملابسك المفضلة بطريقة مبسطة باستخدام البخار بعد الرجوع من حفلة أو من الخارج (بعد تناول الطعام أو تدخين السجائر). لم تعد هناك حاجة لغسيل الملابس غير المتّسخة، حيث يمكنك تنظيفها بطريقة مبسطة باستخدام أربع دورات متوفرة لأنواع الأقمشة المختلفة.

يتضمن هذا الدليل معلومات مهمة حول عملية التركيب والاستخدام والعناية بغسالة Samsung الجديدة. يمكنك الرجوع إليه للتعرّف على وظائف لوحة التحكم، وللحصول على تعليمات حول كيفية استخدام الغسالة، بالإضافة إلى الحصول على تلميحات لتحقيق أقصى استفادة من أحدث الميزات والإمكانات المتوفرة بها. يرشدك القسم "**استكشاف المشاكل وحلها ورموز المعلومات**" الوارد في الصفحة ٣٧ إلى ما يتوجب عليك فعله في حالة حدوث عطل بالغسالة الجديدة.

WD0150VDX-02535G-01_AR.indd Sec1:3 2/14/2011 7:22:46 PM

معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يتضمن هذا الدليل معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. ومن ثمّ، يرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة المتوفرة بالغسالة.

ما يجب أن تعرفه حول إرشادات السلامة

يرجى قراءة هذا الدليل بعناية للتأكد من معرفة كيفية تشغيل الميزات والوظائف الشاملة لجهازك الجديد بسلامة وفاعلية. كما يجب الاحتفاظ به في مكان آمن بالقرب من الجهاز للرجوع إليه في المستقبل. واستخدم هذا الجهاز للغرض المُخصص له فقط على النحو الموضح في دليل الإرشادات.
لا تغطي التحذيرات وإرشادات السلامة المهمة الواردة في هذا الدليل جميع الظروف والمواقف المحتمل حدوثها. لذا، يقع على عاتقك مسؤولية اتّباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب الغسالة وصيانتها وتشغيلها.
ونظرًا لأن إرشادات التشغيل التالية تنطبق على طُرز متعددة، فإن خصائص الغسالة التي تستعملها قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كان لديك أي أسئلة أو استفسارات، اتصل بأقرب مركز خدمة، أو ابحث عن التعليمات والمعلومات عبر الإنترنت على الموقع www.samsung.com.

الرموز والاحتياطات المهمة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم الذي بين يديك إلى ما يلي:

حذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى حدوث **إصابات خطيرة للأشخاص و/أو الموت و/أو تلف في الممتلكات**.
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى حدوث إصابات للأشخاص و/أو تلف في الممتلكات**
تنبيه	لتقليل احتمالات نشوب حريق أو حدوث انفجار أو التعرّض لصدمة كهربية أو إصابة جسدية أثناء استخدام الغسالة، اتّبع احتياطات السلامة الأساسية التالية:

	ممنوع المحاولة.
	ممنوع الفك.
	ممنوع اللمس.
	اتّبع الإرشادات بعناية.
	افصل قابس التيار الكهربي من مقبس الحائط.
	تأكد من توصيل الغسالة بطرف أرضي لمنع التعرّض لصدمة كهربية.
	اتصل بمركز الخدمة للحصول على تعليمات.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.
لذا، يرجى اتباعها بعناية.
وبعد قراءة هذا الدليل، احتفظ به في مكان آمن للرجوع إليه في المستقبل.

- اقرأ جميع الإرشادات أولاً قبل استخدام الجهاز.

ينطوي استعمال هذا الجهاز على احتمال التعرّض لمخاطر، كما هو الحال عند استخدام أي جهاز يعمل بالطاقة الكهربية وبه أجزاء متحركة. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرّف على طريقة تشغيله وتوخي الحذر أثناء استخدامه.

WD0150VDX-02535G-01_AR.indd Sec2:4 2/14/2011 7:22:46 PM

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها؛ حيث لا يمكن فتح باب الغسالة بسهولة من الداخل. وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.

⚠ تحذير

لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص لديهم نقص في قدرات جسدية أو عقلية أو حسية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة. إلا تحت إشراف أو توجيه فيما يخص استخدام هذا الجهاز من قِبل الشخص المسئول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

في حالة تلف القابس (سلك التيار الكهربي). يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من قابس التيار الكهربي. وصنابير التزوّد بالماء وأنابيب تصريف الماء. بحيث يسهل الوصول إليها.

بالنسبة للغسالات ذات فتحات تهوية بقاعدتها. تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

يُنصح باستخدام مجموعة خراطيم جديدة وعدم استخدام الخراطيم القديمة مرةً أخرى.

WD0150VDX-02535G-01_AR.indd Sec2:5 2/14/2011 7:22:47 PM

معلومات السلامة

علامات التحذير الصارمة المتعلقة بالتركيب

تحذير

يجب تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.
- قد يؤدي عدم اتّباع هذه التعليمات إلى التعرّض لصدمة كهربية أو نشوب حريق أو حدوث انفجار أو مشكلات بالمنتج أو التعرض للإصابة.

يجب توخي الحذر عند رفع الجهاز لأن وزنه ثقيل

قم بتوصيل سلك الطاقة بمقبس حائط بجهد من ٢٢٠ إلى ٢٤٠ فولت / ٥٠ هرتز أو أعلى من ذلك. ولا تستخدم المقبس إلا لتشغيل هذا الجهاز فقط. بالإضافة إلى ذلك، يجب عدم استخدام سلك تمديد.
- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو تمديد سلك التيار الكهربي إلى التعرّض لصدمة كهربية أو نشوب حريق.
- تأكد من تتطابق كل من الجهد الكهربي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج. قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق. لذا، تأكد من توصيل سلك الطاقة في مقبس الحائط بإحكام.

قم بإزالة أي مواد غريبة، مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.
- افصل قابس التيار الكهربي ونظّفه باستخدام قطعة قماش جافة.
- قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

أدخل قابس التيار الكهربي في مقبس الحائط في الاتجاه الصحيح بحيث يكون اتجاه السلك ناحية الأرض.
- إذا أدخلت قابس الطاقة في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل. وقد يؤدي ذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول أيدي الأطفال، نظرًا لأنها قد تمثل خطرًا عليهم.
- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.

في حالة تلف الجهاز أو قابس التيار الكهربي أو سلك التيار الكهربائي، اتصل بأقرب مركز صيانة.

يجب توصيل الجهاز بطرف أرضي بشكل سليم.لا تقم بتوصيل الجهاز بطرف أرضي بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون.
- قد يؤدي ذلك إلى التعرّض لصدمة كهربية أو نشوب حريق أو حدوث انفجار أو مشكلات بالمنتج
- يجب عدم توصيل سلك التيار الكهربي بمأخذ لم يتم توصيله بطرف أرضي بشكل صحيح على الإطلاق. وتأكد من أن ذلك يتم وفقًا للقواعد المحلية المتّبعة.

يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال. كما يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).يجب عدم تركيب هذا الجهاز في مكان درجة حرارته منخفضة
- قد يؤدي الجليد إلى انفجار الأنابيب

يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.
- قد ينتج عن ذلك التعرّض لصدمة كهربية أو نشوب حريق.

لا تستخدم محولاً كهربيًا.
- قد ينتج عن ذلك التعرّض لصدمة كهربية أو نشوب حريق.

لا تستخدم قابس تيار كهربيًا أو سلك تيار كهربيًا تالفًا أو مقبس حائط غير مُحكم.
- قد ينتج عن ذلك التعرّض لصدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك التيار الكهربي أو ثنيه بقوة.يجب عدم لف سلك الطاقة أو طيه.يجب عدم تعليق سلك الطاقة فوق شيء معدني أو وضع شيء ثقيل فوق سلك التيار الكهربي أو تمرير سلك التيار الكهربي بين أشياء أو دفع سلك التيار الكهربي في المساحة الموجودة خلف الجهاز.
- قد ينتج عن ذلك التعرّض لصدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك الطاقة عند فصل قابس التيار الكهربي.
- يجب فصل قابس التيار الكهربي عن طريق الإمساك بالقابس.
- قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

لا تضع سلك الطاقة والأنابيب في مكان قد يعرّضك للتعثّر والسقوط فوقها.

WD0150VDX-02535G-01_AR.indd Sec2:6 2/14/2011 7:22:47 PM

تنبيه علامات التنبيه المتعلقة بالتركيب

يجب وضع هذا الجهاز بطريقة يمكن من خلالها الوصول إلى قابس التيار الكهربي.
- قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق نتيجة لتسريب الكهرباء.

يجب تركيب الجهاز على أرضية مستوية وصلبة تتحمل وزن الجهاز.
- قد يؤدي عدم اتّباع هذه التعليمات إلى حدوث اهتزازات أو حَركات أو ضوضاء أو مشكلات غير معتادة بالمنتج.

تحذير علامات التحذير الصارمة المتعلقة بالاستخدام

في حالة تعرض الجهاز لكمية زائدة من الماء، قم بإيقاف تشغيل المياه وقطع اتصال الكهرباء بشكل فوري. واتصل بأقرب مركز صيانة.
- لا تلمس سلك التيار الكهربي ببدين مبتلتين
- قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربائية

في حالة إصدار الجهاز لضوضاء غير طبيعية أو رائحة اشتعال أو دخان، افصل قابس التيار الكهربي فورًا واتصل بأقرب مركز صيانة.
- قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

في حالة وجود تسريب للغاز (مثل غاز البروبان أو الغاز النفطي المُسال وما إلى ذلك)، يجب تهوية المكان فورًا دون لمس قابس التيار الكهربي. لا تلمس الجهاز أو سلك الطاقة.
- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث انفجار أو نشوب حريق.

لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. يجب كذلك فصل حامل باب الغسالة عند التخلص من الجهاز.
- قد يعلق الطفل في حالة انحشاره داخل الغسالة، فضلاً عن تعرّضه للاختناق حتى الموت.

تأكد من إزالة الغلاف (الإسفنج / الفوم) الموجود أسفل الغسالة قبل الاستخدام.

WD0150VDX-02535G-01_AR.indd Sec2:7 2/14/2011 7:22:47 PM

معلومات السلامة

يجب عدم غسل العناصر الملوثة بالجازولين أو الكيروسين أو البنزين أو مرقق الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن ذلك التعرّض لصدمة كهربية أو نشوب حريق أو انفجار.

يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسيل/التجفيف/العصر عند درجة حرارة عالية).

- قد ينتج عن اندفاع الماء خارج الغسالة الإصابة بحروق. أو أن تصبح الأرض زلقة.

قد ينتج عن ذلك حدوث إصابات.

- قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو التعرّض للإصابة.

لا تضع يدك تحت الغسالة.

- قد ينتج عن ذلك حدوث إصابات.

لا تلمس قابس التيار الكهربي بيدين مُبتلتين.

- قد ينتج عن ذلك التعرّض لصدمة كهربية.

يجب عدم إيقاف تشغيل الغسالة وفصل قابس التيار الكهربي أثناء تشغيلها.

- قد يؤدي إدخال قابس التيار الكهربي مرة أخرى في مأخذ الحائط إلى حدوث شرارة ينتج عنها التعرّض لصدمة كهربية أو نشوب حريق.

يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة دون إشراف. يجب عدم السماح للأطفال بتسلق الغسالة

- يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو حروق أو الإصابة.

لا تضع يديك أو أي شيء معدني أسفل الغسالة أثناء تشغيلها.

- قد ينتج عن ذلك حدوث إصابات.

يجب عدم فصل الجهاز عن طريق جذب سلك الطاقة. بل يجب دائمًا إمساك القابس بإحكام وسحبه في خط مستقيم من مأخذ الكهرباء.

- قد يؤدي تلف السلك إلى حدوث عطل تماس كهربائي و/أو حريق و/أو التعرّض لصدمة كهربية

لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني. وما إلى ذلك) خلاف المنصهر القياسي.
- في حالة الحاجة لإصلاح الجهاز أو إعادة تركيبه. اتصل بأقرب مركز صيانة إليك.
- قد يؤدي عدم اتّباع هذه التعليمات إلى التعرّض لصدمة كهربية أو نشوب حريق أو حدوث مشكلات بالمنتج أو التعرض للإصابة.

عندما يصبح خرطوم التزوّد بالماء غير محكم وينتج عنه تسريب للماء في الجهاز. يجب فصل سلك الطاقة من مأخذ الكهرباء.

- قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

يجب فصل قابس التيار الكهربي عند عدم استخدام الجهاز لفترات طويلة أو أثناء العواصف الرعدية أو البرق.

- قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

WD0150VDX-02535G-01_AR.indd Sec2:8 2/14/2011 7:22:48 PM

تنبيه علامات التنبيه المتعلقة بالاستخدام

عندما يعلق بالغسالة مادة غريبة، مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، افصل قابس التيار الكهربي ونظّف الغسالة باستخدام قطعة قماش رطبة وناعمة.

- يؤدي عدم الالتزام بذلك إلى تغيّر ألوان الغسالة أو حدوث تشويه أو تلف أو صدأ بها.

قد ينكسر الزجاج الأمامي بالغسالة عند تعرّضها لصدمة عنيفة. لذا، يجب توخي الحرص عند استخدام الغسالة. قد تتعرّض للإصابة عند انكسار الزجاج.

- عند حدوث فشل في التزوّد بالماء أو عند إعادة توصيل خرطوم التزوّد بالماء، يجب فتح الصنبور ببطء،افتح صنبور الماء ببطء في حالة عدم الاستخدام لفترة طويلة.
- قد يؤدي ضغط الهواء الموجود في خرطوم التزوّد بالماء أو أنبوب الماء إلى تلف جزء من الغسالة أو تسريب الماء.

في حالة حدوث خطأ بالتصريف أثناء التشغيل، تحقق من عدم وجود مشكلة تتعلق بالتصريف.

- قد يؤدي استخدام الغسالة أثناء تسرّب المياه منها نتيجة وجود مشكلة بالتصريف إلى التعرّض لصدمة كهربية أو نشوب حريق نتيجة حدوث تسرّب كهربي.

يجب إدخال الملابس بالكامل في الغسالة بحيث لا تعلق بالباب.

- قد يؤدي ذلك إلى تلف الملابس أو الغسالة، أو قد ينتج عنه حدوث تسريب للماء.

تأكد من إغلاق الصنبور في حالة عدم استخدام الغسالة.

- تأكد من ربط المسمار الملولب بموصّل خرطوم الماء بإحكام.
- يؤدي عدم الالتزام بذلك إلى تلف الجهاز أو حدوث إصابات.

تحقق من عدم التصاق أي مواد غريبة (مخلفات أو خيوط، وما إلى ذلك) بالحاجز المطاطي.

- قد يحدث تسريب للماء إذا لم يتم إغلاق الباب تمامًا.

يجب فتح الصنبور والتحقق من إحكام موصل خرطوم الماء وعدم وجود تسريب للماء قبل استخدام المنتج.

- في حالة عدم إحكام المسامير أو موصّل خرطوم التزوّد بالماء، قد يحدث تسريب للماء.

WD0150VDX-02535G-01_AR.indd Sec2:9 2/14/2011 7:22:48 PM

معلومات السلامة

يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل ملابس الغسيل أو شموع مُضاءة أو سجائر مشتعلة أو أطباق أو مواد كيماوية أو أشياء معدنية، وما إلى ذلك).

- قد يؤدي ذلك إلى التعرّض لصدمة كهربية أو نشوب حريق أو مشكلات بالمنتج أو وقوع إصابات.

يجب عدم رش مواد متطايرة، مثل المبيدات الحشرية، فوق سطح الجهاز.

- بالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا التعرّض لصدمة كهربية أو نشوب حريق أو حدوث مشكلات بالمنتج.

لا تضع شيئًا ينتج عنه مجال كهرومغناطيسي بالقرب من الغسالة.

- قد يؤدي ذلك إلى التعرّض لإصابات نتيجة لحدوث خلل في وظائف التشغيل.

نظرًا لأن الماء الذي يتم تصريفه أثناء الغسيل بدرجات حرارة عالية أو أثناء دورة التجفيف يكون ساخنًا، يجب عدم لمسه.

- قد يؤدي ذلك إلى الإصابة بحروق أو إصابات.

يجب عدم غسل مفروشات المقاعد أو السجاد أو الأقمشة (*) المقاومة للماء أو عصرها أو تجفيفها ما لم يكن جهازك يتضمن برنامجًا خاصًا لغسلها.

- يجب عدم غسل السجاد السميك أو الثقيل، حتى في حالة وجود علامة الغسالة على بطاقة العناية بالمنتج.
- قد يؤدي ذلك إلى حدوث إصابات أو تلف بالغسالة أو بالحوائط أو بالأرضية أو بالملابس نتيجة للاهتزازات غير الطبيعية الناشئة أثناء الغسيل.

* المفروشات الصوفية أو الأغطية المقاومة للأمطار أو سترات الصيد أو سراويل التزلج أو حقائب النوم أو أغطية الحفاظات أو الملابس الرياضية أو أغطية الدراجات والدراجات البخارية والسيارات، وما إلى ذلك.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق بالغسالة.

- قد ينتج عن ذلك التعرّض لصدمة كهربية أو إصابة نتيجة لتسرّب الماء.

يجب عدم لمس الحوض من الداخل أثناء عملية التجفيف أو بعدها مباشرةً؛ حيث يكون ساخنًا.

- قد يؤدي ذلك إلى الإصابة بحروق.

لا تضع يدك في درج المسحوق بعد فتحه.

- قد ينتج عن ذلك إصابات؛ حيث قد تلتصق يدك بدرج إدخال المسحوق. تجنب وضع أي شئ غير الملابس بداخل الغسالة (مثل الأحذية وبقايا الطعام والحيوانات).
- قد يؤدي ذلك إلى تلف الغسالة أو التعرّض للإصابة والوفاة في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.

يجب عدم الضغط على الأزرار باستخدام أدوات حادة، مثل المسامير أو السكاكين أو الأظافر، وما إلى ذلك.

- قد يؤدي ذلك إلى التعرّض لصدمة كهربية أو حدوث إصابات.

يُحظر غسل الملابس التي تحتوي على زيوت أو كريمات أو مستحضرات سائلة، والتي توجد في متاجر المستحضرات الجلدية أو عيادات التدليك عادةً.

- قد يؤدي ذلك إلى تشوه الحاجز المطاطي وتسرب الماء.

يجب عدم ترك أي أشياء معدنية، مثل الدبابيس أو دبابيس الشعر أو مواد التبييض، في الحوض لفترات طويلة من الوقت.

- قد يؤدي ذلك إلى تعرّض الحوض للصدأ.
- وفي حالة بدء ظهور الصدأ على سطح الحوض، نظّف سطحه باستخدام سائل تنظيف (متعادل) وقطعة إسفنج. ولا تستخدم فرشاة معدنية نهائيًا.

لا تستخدم سائل تنظيف جاف بشكل مباشر، ولا تغسل الملابس أو تشطفها أو تجففها في حالة إضافة مسحوق تنظيف جاف إليها.

- قد يؤدي ذلك إلى حدوث اشتعال فوري نتيجة للحرارة الناجّة عن تأكسد الزيت.

لا تستخدم الماء القادم من أجهزة تبريد/تسخين الماء.

- قد ينتج عن ذلك حدوث مشكلات بالغسالة.

WD0150VDX-02535G-01_AR.indd Sec2:10 2/14/2011 7:22:48 PM

لا تستخدم صابون غسل يدين متعادل بالغسالة.
- في حالة تراكم الصابون المتعادل وتصلبه داخل الغسالة، قد تحدث مشكلات بالمنتج، مثل تغير لونه أو ظهور صدأ به أو انبعاث روائح كريهة منه.

لا تغسل عناصر الغسيل كبيرة الحجم، مثل المفروشات، في شبكة الغسيل.
- ضع الجوارب وحمالات الصدر في شبكة الغسيل واغسلها مع بقية ملابس الغسيل.
- يؤدي عدم الالتزام بذلك إلى حدوث إصابة نتيجة للاهتزازات غير الطبيعية.

لا تستخدم مسحوق غسيل متيبس.
- قد يحدث تسرّب للماء في حالة تراكم المسحوق المتيبس داخل الغسالة.

بالنسبة للغسالات ذات فتحات تهوية بقاعدتها، تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

تأكد من إفراغ جميع جيوب الملابس التي سيتم غسلها.
- قد تتسبب الأشياء الصلبة والحادة، مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير الملولبة أو الأحجار، في إحداث أضرار بالغة بالجهاز.

يجب عدم غسل الملابس المزوّدة بإبزيمات أو أزرار كبيرة الحجم أو أشياء معدنية أخرى ثقيلة الوزن بالغسالة.

يجب عدم استخدام المجفف بالدوار في حالة استخدام مواد كيميائية للتنظيف.

لا يجب السماح بتراكم للنسالات حول المجفف الدوار.

تجنب تجفيف الملابس غير المغسولة داخل المجفف الدوار.

يجب غسل الملابس المتسخة بمواد مثل زيت الطهي والأسيتون والكحول والبنزين والكيروسين ومزيلات البقع وزيت التربنتين والشمع ومزيلات الشمع. يجب غسل كل ذلك بماء ساخن مع إضافة كمية إضافية من مسحوق الغسيل قبل تجفيفها في المجفف الدوار.

لا يجب تجفيف أشياء مثل المطاط الإسفنجي (فوم اللاتكس) أو أغطية الرأس الخاصة بالحمام أو الأقمشة المقاومة للماء أو الأقمشة والأشياء المدعومة بالمطاط أو الوسائد المحشوة بالمطاط الإسفنجي في المجفف الدوار.

يجب استخدام منعمات الأقمشة أو المنتجات المشابهة كما هو محدد في إرشادات استخدام منعمات الأقمشة.

يجري الجزء الأخير من دورة التجفيف الدوار بدون تسخين (دورة التجفيف البارد) لضمان ترك الملابس بدرجة حرارة تضمن عدم تعرضها للتلف.

[تحذير]
لا تقم أبدًا بإيقاف المجفف الدوار قبل انتهاء دورة التجفيف ما لم يتم إخراج الغسيل بالكامل وتوزيعه بسرعة حتى تتبدد الحرارة.
لا يجب تركيب الجهاز خلف باب قابل للغلق أو باب منزلق أو باب بمفصلة توجد على الجهة المقابلة لجهة المجفف الدوار.

علامات التحذير الصارمة المتعلقة بالتنظيف

غذير

لا تنظف الجهاز عن طريق رش الماء فوقه مباشرةً. لا تستخدم البنزين أو مرقق القوام أو الكحول لتنظيف الجهاز.
- قد يؤدي ذلك إلى تغيّر في لون الجهاز أو حدوث تشويه أو تلف به، أو التعرّض لصدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.
- قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

WD0150VDX-02535G-01_AR.indd Sec2:11 2/14/2011 7:22:48 PM

المحتويات

إعداد الغسالة ١٣

١٣ **فحص الأجزاء**
١٤ **استيفاء متطلبات التركيب**
١٤ مصدر الطاقة الكهربية والتوصيل بطرف أرضي
١٤ تزويد الغسالة بالماء
١٥ التصريف
١٥ التثبيت الأرضي
١٥ درجة الحرارة المحيطة
١٥ تركيب القنطرة أو الخزانة
١٥ **تركيب الغسالة**

غسل الملابس ٢١

٢١ **الغسل للمرة الأولى**
٢١ **إرشادات أساسية**
٢٢ **استخدام لوحة التحكم**
٢٥ Child Lock (التأمين ضد عبث الأطفال)
٢٥ Sound off (إيقاف تشغيل الصوت)
٢٦ Delay End (نهاية التأجيل)
٢٦ Stop&Add (إيقاف وإضافة)
٢٧ Eco Bubble (الفقاعات صديقة البيئة)
٢٨ الغسيل بالهواء
٢٩ **استخدام دورة التجفيف**
٣٠ غسل الملابس باستخدام قرص تحديد الدورة
٣١ غسل الملابس يدويًا
٣١ **إرشادات الغسيل**
٣٣ **معلومات حول مسحوق الغسيل والمواد الإضافية**
٣٣ مسحوق الغسيل الذي يمكن استخدامه
٣٣ درج مسحوق الغسيل

تنظيف الغسالة وصيانتها ٣٤

٣٤ **تنظيف الأسطح الخارجية**
٣٤ **تنظيف الأسطح الداخلية**
٣٤ **تنظيف الموزّع**
٣٥ **تخزين الغسالة**
٣٥ **تنظيف مصفاة المخلفات**
٣٦ **تنظيف حاجز الباب**
٣٦ **الحفاظ على الغطاء العلوي والإطار الأمامي**

استكشاف المشاكل وحلها ورموز المعلومات ٣٧

٣٧ **تحقق مما يلي إذا كانت الغسالة...**
٣٩ **رموز المعلومات**

جدول الدورات ٤٠

٤٠ **جدول الدورات**

الملحق ٤١

٤١ **جدول العناية بالأقمشة**
٤١ **حماية البيئة**
٤١ **بيان التوافق**
٤٢ **المواصفات**

WD0150VDX-02535G-01_AR.indd Sec4:12 2/14/2011 7:22:48 PM

إعداد الغسالة

تأكد من اتّباع فني التركيب لهذه الإرشادات بدقة حتى تعمل غسالتك الجديدة بشكل صحيح ولتجنب مخاطر التعرّض للإصابة عند الغسيل.

فحص الأجزاء

أخرج الغسالة بحرص من صندوقها وتأكد من وجود جميع الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن أو عدم استلام لجميع الأجزاء، اتصل بخدمة عملاء Samsung أو الموزّع المعتمد لدى Samsung.

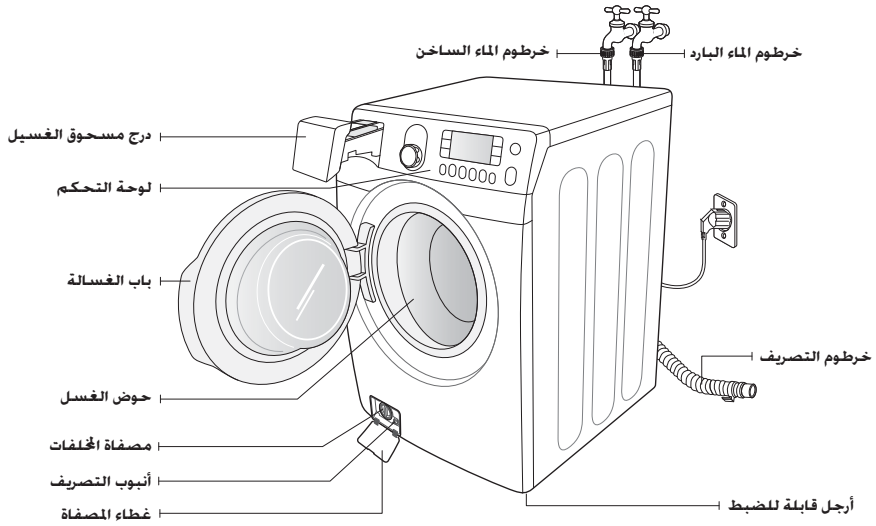

مفتاح الربط

أغطية فتحات المسامير


خرطوم التزوّد بالماء

حامل الخرطوم


شريط ربط الخرطوم البلاستيكي

WD0150VDX-02535G-01_AR.indd Sec9:13 2/14/2011 7:22:48 PM

إعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربية والتوصيل بطرف أرضي

تحذير ⚠ لا تستخدم سلك تمديد مطلقًا.
استخدم سلك التيار الكهربي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن مصدر التيار الكهربي يتوفر فيه:
- قاطع دائرة كهربية أو منصهر بقدرة ٢٢٠ إلى ٢٤٠ فولت من تيار متردد / ٥٠ هرتز
- دائرة كهربية فرعية منفصلة لتشغيل الغسالة فقط

يجب توصيل الغسالة بطرف أرضي. في حالة حدوث خلل أو عطل في الأداء، يعمل التوصيل بطرف أرضي على تقليل خطورة التعرض لصدمة كهربية. وذلك بتوفير مسار أقل مقاومة للتيار الكهربي.
يتم تزويد الغسالة بسلك تيار كهربي به قابس طرف أرضي بثلاثة سنون لاستخدامه في مأخذ أرضي تم تركيبه بشكل صحيح.

لا تقم مطلقًا بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

قد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى التعرّض لصدمة كهربائية.
ولذا، استشر فني كهرباء مؤهلاً أو فني صيانة إذا لم تكن متأكدًا من صحة التوصيل الأرضي للغسالة. ويُحظر تعديل القابس المرفق مع الغسالة. وفي حالة عدم توافقه مع المأخذ، استعن بفني كهرباء مؤهل لتركيب مأخذ مناسب.

تزويد الغسالة بالماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء من ١٣٧ إلى ٨٠٠ كيلوباسكال. قد يتسبب ضغط الماء الأقل من ١٣٧ كيلوباسكال في تلف صمام الماء، مما لا يسمح بإغلاقه بالكامل، أو قد تستغرق الغسالة وقتًا أطول مما تسمح به عناصر التحكم لملئها بالماء، مما ينتج عنه إيقاف تشغيل الغسالة. (يتم تضمين نظام تحديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)

يجب أن تكون صنابير الماء على بُعد ١٢٠ سم من الجانب الخلفي للغسالة لتسهيل وصول خراطيم صنابير الماء المرفقة إلى الغسالة.

تبيع معظم متاجر السباكة خراطيم دخول الماء بمختلف أطوالها، والتي تصل إلى ٣٠٥ سم.

يمكنك تقليل مخاطر تسرب الماء أو تعرّضه للتلوث عن طريق:
- تسهيل وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة.
- الفحص دوري للتأكد من عدم تسرب الماء من تركيبات خراطيم الماء.

تحذير ⚠ افحص جميع التوصيلات بصمام وصنابير الماء للتحقق من عدم وجود أي تسريب قبل استخدام الغسالة للمرة الأولى.

WD0150VDX-02535G-01_AR.indd Sec9:14 2/14/2011 7:22:49 PM

التصريف

توصي Samsung باستخدام ماسورة رأسية ارتفاعها ٤٦ سم. ويجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اتجاه الماسورة الرأسية. ويجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لتسمح بإدخال القطر الخارجي لخرطوم التصريف (يتم إرفاقه بالمصنع).

التثبيت الأرضي

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. وقد تحتاج الأسطح الخشبية إلى تقوية لتقليل الاهتزاز و/أو الأحمال غير المتوازنة. جدير بالذكر أن تغطية الأرض بالسجاد، إضافة إلى أسطح البلاط الناعم، عاملان مساهمان في حدوث الاهتزازات واحتمالية حَرْك الغسالة بشكل طفيف أثناء دورة التنشيف.

لا تقم مطلقًا بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء، حيث إن الغسالة تحتفظ دومًا ببعض الماء في صمام الماء والمضخة وأجزاء من الخرطوم؛ حيث قد يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالسيور والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم، يجب توفير الحد الأدنى من الفراغات حولها كما يلي:

الجوانب ـــ ٢٥ ملليمتر	الجانب الخلفي ـــ ١٠٢ ملليمتر
الجزء العلوي ـــ ٤٣٢ ملليمتر	الواجهة ـــ ٥١ ملليمتر

في حالة تركيب الغسالة والمجفف معًا، يجب أن يكون بواجهة القنطرة أو الخزانة فتحة هواء حرة مساحتها ٤٦٥ سم على الأقل. علمًا بأن الغسالة وحدها لا تتطلب فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ١

اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:

- سطح صلب ومستوٍ دون سجاد أو أرضية قد تعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تهوية كافية
- لا يصل إلى مرحلة التجمد (أقل من ٠ درجة مئوية)
- يكون بعيدًا عن مصادر الحرارة، مثل الزيت أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك التيار الكهربي الخاص بها

WD0150VDX-02535G-01_AR.indd Sec9:15 2/14/2011 7:22:49 PM

إعداد الغسالة

الخطوة رقم ٢

فك مسامير الشحن

قبل تركيب الغسالة، يجب إزالة جميع مسامير الشحن من اللوحة الخلفية للجهاز.

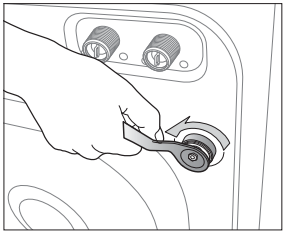

١. قم بفك جميع المسامير باستخدام مفتاح الربط المرفق مع الجهاز.

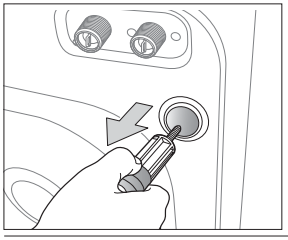

٢. امسك المسمار باستخدام مفتاح الربط واسحبه من خلال الجزء العريض للفتحة. كرر ذلك لفك جميع المسامير.

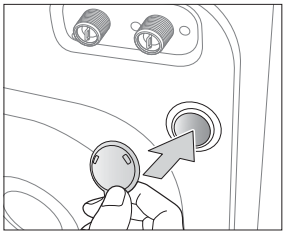

٣. سدّ جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

٤. احتفظ بمسامير الشحن في مكان بعيد آمن: فقد تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

⚠ تحذير: قد تشكّل مواد التعبئة خطرًا على الأطفال. ولذا، احتفظ بجميع مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين، وغيرها من المواد) بعيدًا عن متناول أيدي الأطفال.

WD0150VDX-02535G-01_AR.indd Sec9:16 2/14/2011 7:22:49 PM

الخطوة رقم ٣

ضبط قائم استواء الغسالة

عند تركيب الغسالة، تأكد من توصيل قابس التيار الكهربي وخرطوم التزوّد بالماء وخرطوم التصريف بسهولة.

١. ضع الغسالة في المكان المناسب.

٢. اجعل الغسالة مستوية عن طريق لف قائم الاستواء إلى الداخل والخارج يدويًا حسب الحاجة.

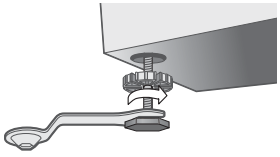

٣. عند استواء الغسالة، أحكم ربط الصواميل باستخدام مفتاح الربط المرفق مع الغسالة.

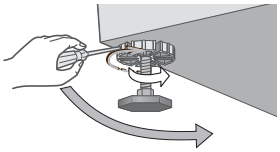

الخطوة رقم ٤

توصيل خرطوم التزوّد بالماء والتصريف

توصيل خرطوم التزوّد بالماء

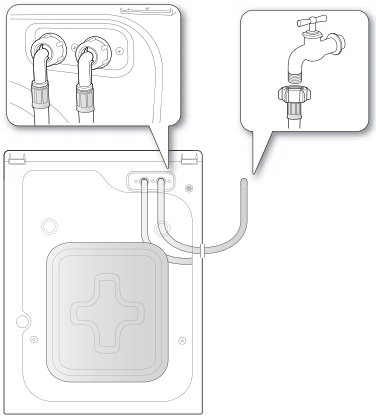

١. وصّل الذراع الذي على شكل حرف L -الذي يتم توصيل خرطوم التزوّد بالماء البارد به- بمدخل التزوّد بالماء البارد الموجود باللوحة الخلفية للغسالة، وأحكم ربطه يدويًا.

يجب توصيل أحد طرفيّ خرطوم التزوّد بالماء بالغسالة، وتوصيل الطرف الآخر بصنبور الماء، مع مراعاة عدم جعل الخرطوم مشدودًا. إذا كان الخرطوم أقصر من المطلوب، استبدله بخرطوم أطول يتحمل الضغط العالي.

٢. وصّل الطرف الآخر من خرطوم التزوّد بالماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. يمكنك تغيير موضع توصيل خرطوم الماء بالغسالة إذا لزم الأمر من خلال إرخاء مثبّت الخرطوم، ثم لفّ الخرطوم وإعادة ربطه بإحكام.

بالنسبة للطُرز المحددة المزودة بمدخل إضافي للتزوّد بالماء الساخن:

١. وصّل الذراع الذي على شكل حرف L -الذي يتم توصيل خرطوم التزوّد بالماء الساخن به- بمدخل التزوّد بالماء الساخن الموجود باللوحة الخلفية للغسالة، وأحكم ربطه يدويًا.

٢. وصّل الطرف الآخر من خرطوم التزوّد بالماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.

٣. استخدم قطعة على شكل Y إذا أردت استخدام الماء البارد فقط.

WD0150VDX-02535G-01_AR.indd Sec9:17 2/14/2011 7:22:50 PM

إعداد الغسالة

توصيل خرطوم التزوّد بالماء

١. أزل المحوّل من خرطوم التزوّد بالماء.

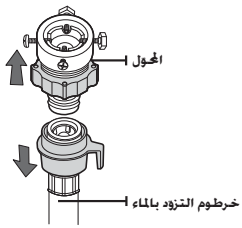

٢. استخدم مفك براغي من النوع "+" لفك المسامير الأربعة الموجودة بالمحوّل. ثم أخرج المحوّل. وقم بلف الجزء رقم (٢) باتجاه السهم حتى تكون هناك مسافة مقدارها ٥ مم بينهما.



٣. قم بتوصيل المحوّل بصنبور الماء عن طريق ربط المسامير بإحكام مع رفع المحوّل لأعلى. لف الجزء رقم (٢) باتجاه السهم. ووصّل الجزءين (١) و(٢).

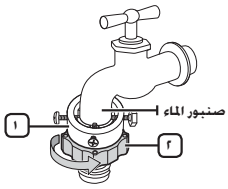

٤. وصّل خرطوم التزوّد بالماء بالمحوّل. عند إرخاء الجزء (٣)، يتصل الخرطوم بالمحوّل تلقائياً محدثًا صوت "نقرة".

بعد توصيل الخرطوم بالمحوّل، تأكد من توصيله بشكل صحيح عن طريق جذب الخرطوم لأسفل.

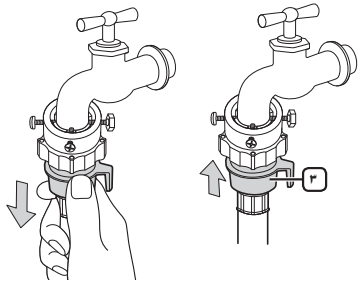

٥. وصّل الطرف الآخر من الخرطوم بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. قم بلف الخرطوم في اتجاه عقارب الساعة.

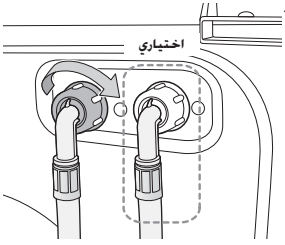

WD0150VDX-02535G-01_AR.indd Sec9:18 2/14/2011 7:22:50 PM

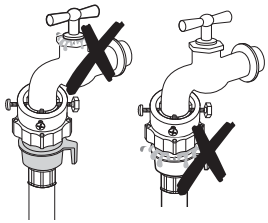

١. افتح صنبور الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو المحوّل.
كرّر الخطوات السابقة في حالة ملاحظة تسرب للماء.

⚠ تحذير: لا تستخدم الغسالة في حالة ملاحظة تسرب للماء؛ حيث قد يتسبب ذلك في التعرّض لصدمة كهربية أو الإصابة.

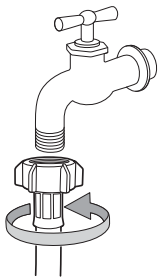

- إذا كانت سدّادة صنبور الماء من النوع الملولب، قم بتوصيل خرطوم التزوّد بالماء بالصنبور كما هو موضح.

استخدم صنبورًا من النوع العادي للتزوّد بالماء. وإذا كان الصنبور مربعًا أو كبيرًا جدًا، أزل الحلقة الفاصلة قبل إدخال الصنبور في المحوّل.

WD0150VDX-02535G-01_AR.indd Sec9:19 2/14/2011 7:22:50 PM

إعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

١. فوق حافة حوض الغسيل: يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم. للاحتفاظ بثني خرطوم التصريف. استخدم دليل الخرطوم البلاستيكي المزوّد مع الجهاز. ثبّت الحامل على الجدار بواسطة خطاف أو في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

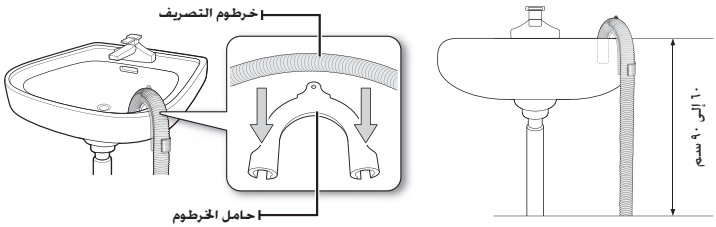

٢. في فرع أنبوب تصريف الحوض: يجب أن يكون فرع أنبوب التصريف فوق فتحة تفريغ الحوض (السيفون) بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

٣. في أنبوب تصريف الماء: نوصي باستخدام أنبوب عمودي بارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

الخطوة رقم ٥

تشغيل الغسالة

وصّل سلك التيار الكهربائي بمنفذ تيار كهربائي بقدرة من ٢٢٠ إلى ٢٤٠ فولت تيار متردد و٥٠ هرتز محمي بصمام كهربائي أو قاطع دائرة كهربائية. (لمزيد من المعلومات حول متطلبات التوصيل الكهربائي والأرضي، راجع الصفحة رقم ١٤.)

WD0150VDX-02535G-01_AR.indd Sec9:20 2/14/2011 7:22:51 PM

غسل الملابس

يتمثل أصعب أمر عند استخدام الغسالة الجديدة من Samsung في تحديد الأشياء التي يجب غسلها أولاً.

الغسل للمرة الأولى

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة من دون ملابس.

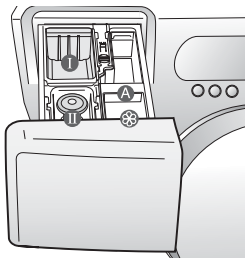

١. اضغط على الزر **Power (تشغيل)**.
٢. أضف كمية قليلة من مسحوق الغسيل في المكان المخصص له Ⅱ في درج مسحوق الغسيل.
٣. افتح صنبور الماء لتزويد الغسالة بالماء.
٤. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

يؤدي ذلك إلى إزالة الماء المتبقي في الغسالة بعد التشغيل الاختباري الذي قامت به الشركة المصنّعة للغسالة.

الدرج Ⅰ: مسحوق للغسل الأولي أو نشاء.
الدرج Ⅱ: مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقيه الماء ومواد ما قبل النقع ومواد التبييض ومواد إزالة البقع.

استخدم درج المنظفات السائلة لوضع منظف سائل (راجع الصفحة ٣٣ بدليل الطراز المماثل). لا تضف مسحوق تنظيف بدرج المنظّف السائل.

الدرج ❀: للمواد الإضافية، مثل مكوّن أو منعّم الأقمشة (املأ الدرج بحيث لا تتجاوز الحافة السفلية (الحد الأقصى) العلامة "A")

إرشادات أساسية

١. ضع الملابس في الغسالة.

⚠ تحذير
لا تتجاوز الوزن المحدد للغسالة. لتحديد سعة الوزن لنوع الملابس التي ترغب في غسلها، راجع الجدول الوارد في الصفحتين ٣١-٣٢.

- تأكد من أن الملابس غير عالقة بالباب، حيث قد يؤدي ذلك إلى تسرّب الماء.
- قد يتبقى مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. ولذا، أزل أي مسحوق متبقي، حيث قد يتسبب ذلك في تسرّب الماء.
- احذر لمس الباب الزجاجي عندما تكون الغسالة قيد التشغيل؛ حيث قد تكون ساخنة.
- احذر فتح درج مسحوق الغسيل أو مصفاة المخلفات عندما تكون الغسالة قيد التشغيل؛ حيث قد تتعرّض لماء أو بخار ساخن.
- احذر غسل العناصر المقاومة للماء بالدورة العادية، فيما عدا برنامج العناية بملابس الخروج.

٢. أغلق الباب بإحكام.
٣. شغّل الغسالة.
٤. أضف المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الملابس التي أضفتها.سيضيء مؤشر الغسل وسيظهر وقت الدورة المحدد على لوحة العرض.
٦. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**..

WD0150VDX-02535G-01_AR.indd Sec5:21 2/14/2011 7:22:52 PM

غسل الملابس

استخدام لوحة التحكم

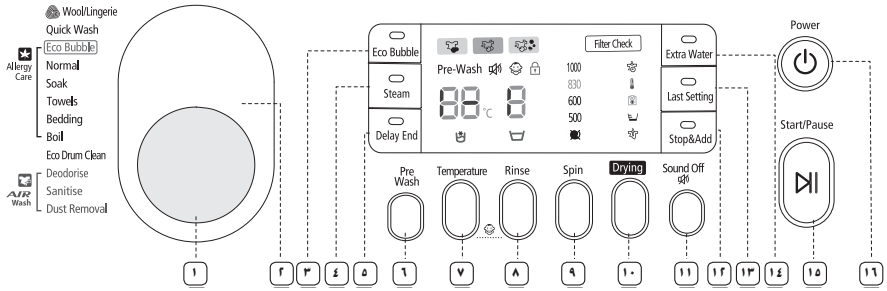

١ CYCLE SELECTOR (قرص تحديد الدورة)	لاختيار نوع التدوير وسرعة التنشيف للدورة. لمزيد من المعلومات، راجع "غسل الملابس باستخدام قرص تحديد الدورة". (راجع الصفحة ٣٠) **Wool/Lingerie (صوف/ملابس النساء الداخلية)** - هذه الدورة لملابس النساء الداخلية والملابس المصنوعة من الصوف. للملابس الصوفية التي يمكن وضعها في الغسالة. • تتم دورة غسيل الصوف باستخدام عملية الاهتزاز الخفيف. وأثناء عملية الغسيل، تستمر عمليتا الاهتزاز الخفيف والنقع لحمابة الألياف الصوفية من الانكماش / التلف وللحصول على نظافة فائقة بسهولة. ولا تعد عملية التوقف هذه مشكلة. • يُنصح باستخدام مسحوق تنظيف متعادل لدورة الصوف. للحصول على نتائج غسيل رائعة ولعناية فائقة بالألياف الصوفية. تم اعتماد دورة غسيل الملابس الصوفية في هذه الغسالة من قبل Woolmark لغسيل منتجات Woolmark التي يمكن وضعها في الغسالة، شريطة أن يتم غسيل المنتجات وفقًا للتعليمات الموجودة على الملصق الموجود على الملابس والتعليمات الصادرة من الشركة المصنعة لهذه الغسالة، M0509. **Quick Wash (غسيل سريع)** - للملابس خفيفة الاتساخ التي تحتاجها بسرعة. **Normal (عادي)** - لمعظم الأقمشة، بما في ذلك الأقطان والملابس الكتانية والملابس عادية الاتساخ. **Soak (نقع)** - تزيل هذه الدورة الأوساخ بشكل كامل من الملابس باستخدام وظيفة النقع. **Towels (المناشف)** - لمناشف الحمام ومناشف الوجه والمفارش. **Bedding (أغطية السرير)** - للأشياء الضخمة، مثل البطاطين وملاءات الأسرّة. وعند غسل ألحفة، استخدم مسحوقًا سائلاً. **Boil (غلي)** - هذه الدورة ملائمة لغسيل الملابس الداخلية التي نغيّرها يوميًا. ويتم فيها الإزالة التامة للاتساخات والتعقيم في نفس الوقت. **Eco Drum Clean (تنظيف الحاوية صديق البيئة)** - لتنظيف الحاوية. لتنظيف الحاوية من الأتربة والبكتيريا. ويُوصى تشغيله بانتظام (بعد كل ٤٠ دورة غسيل) دون منظّف أو مبيّض. **Air Wash (الغسيل بالهواء)** - هذه الدورة ملائمة لإزالة الروائح الكريهة. قم بلف Cycle Selector (قرص تحديد الدورة) للتبديل بين أوضاع التشغيل التالية: (Dust Removal → Sanitize → Deodorize) • Deodorization (إزالة الرائحة الكريهة) - لإزالة الروائح الكريهة من الغسيل. • Sanitize (التعقيم) - لإزالة الروائح الكريهة وتعقيم الغسيل عن طريق إجراء الغسيل بالهواء عند درجة حرارة عالية. • Dust Removal (إزالة الأتربة) - استخدم هذه الوظيفة لتعقيم الملابس لمدة أطول.
٢ شاشة عرض LCD	شاشة عرض LCD الكبيرة سهلة الاستخدام، وتوفر إرشادات وتشخيصات، كما تبقيك على علم بحالة الدورة والوقت المتبقي.

WD0150VDX-02535G-01_AR.indd Sec5:22 2/14/2011 7:22:52 PM

٣ زر تحديد ECO BUBBLE (الفقاعات صديقة البيئة)	يتم تشغيل تحديد Eco Bubble (الفقاعات صديقة البيئة) بشكل افتراضي. اضغط على زر الخيار Eco Bubble (الفقاعات صديقة البيئة) مرة واحدة لإلغاء التحديد و Bubble Generator OFF (إيقاف تشغيل مولّد الفقاعات) الموضح باللون. ثم اضغط عليه مرة أخرى لتعيين الوظيفة إلى ON (تشغيل). • بعض دورات الغسيل يكون بها الخيار Eco Bubble (الفقاعات صديقة البيئة) معينًا إلى ON (تشغيل). ويتم توضيح ذلك باللوحة. كما يتم تشغيل "المولّد" تلقائيًا. • لا تحتاج دورات الغسل الأخرى لهذا الخيار وتقوم "بإيقاف تشغيل المولّد" تلقائيًا. • يمكنك ضبط هذا الخيار يدويًا عند استخدام عدد من الدورات. مما يؤثر على وقت الغسل بشكل واضح على اللوحة لتحقيق النتائج المطلوبة (لمزيد من المعلومات الرجاء مراجعة الصفحة ٢٧)
٤ زر تحديد STEAM (التنظيف بالبخار)	اضغط على هذا الزر لاختيار التنظيف بالبخار. ويتم تشغيل التنظيف بالبخار بالدورات Quick Wash (الغسل السريع) وNormal (عادي) وSoak (نقع) وTowels (المناشف) و Bedding (البطاطين) وBoil (غلي). علمًا بأنه يُستخدم للملابس شديدة الاتساخ ذات الألوان الثابتة. ويعمل الغسيل بالبخار على تحسين معالجة البقع. كما يستخدم ماءً أقل لكل دورة.
٥ زر تحديد DELAY END (نهاية التأجيل)	يمكن تأجيل أي دورة حتى ٢٤ ساعة بزيادة قدرها ساعة واحدة عند الضغط على الزر في كل مرة. تشير الساعة المعروضة إلى الوقت الذي يتم بدء عملية الغسل فيه.
٦ زر تحديد PRE WASH (غسيل أولي)	لاستخدام هذه الميزة. أضف مسحوق غسيل إلى الجزء الخاص بالغسيل الأولي في درج المسحوق. وعند التشغيل. يتم ملء الغسالة بالماء البارد والمسحوق وتعمل الغسالة. ثم تنفّذ دورة التجفيف. وبعد ذلك تنتقل الغسالة إلى الدورة المحددة. لا يمكن اختيار بعض الدورات مع هذا الخيار.* * لا يمكنك تحديد خيار PreWash (الغسيل الأولي) في الدورات Wool (الصوف) و Quick Wash (الغسيل السريع).
٧ زر تحديد TEMPERATURE (درجة الحرارة)	اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات درجة حرارة الماء المتاحة: (ماء بارد أو ٣٠ درجة مئوية أو ٤٠ درجة مئوية أو ٦٠ درجة مئوية أو ٩٥ درجة مئوية).
٨ زر تحديد RINSE (شطف)	اضغط على هذا الزر لإضافة دورات شطف إضافية. علمًا بأن الحد الأقصى لعدد دورات الشطف خمس دورات.
٩ زر التحديد SPIN (تنشيف)	اضغط على هذا الزر بشكل متكرر للتبديل بين سرعات دورة التنشيف المتاحة. "No spin (بدون تنشيف) ⊗" - تظل الملابس في الحاوية دون تشغيل دورة التنشيف بعد تصريف الماء النهائي.
١٠ زر DRYING (التجفيف)	اضغط على هذا الزر للتبديل بين الخيارات التالية: **Cup Board (الخزانة)** ← **Small (صغير)** ← **Shirt (قميص)** ← **Low Temp (درجة حرارة منخفضة)** ← **Time Dry (مدة التجفيف)** (٣٠ دقيقة ← ١:٠٠ س ← ١:٣٠ س ← ٢:٠٠ س ← ٢:٣٠ س) ← **Cup Board (الخزانة)** **Cup Board (الخزانة)** - حدد خيار تجفيف الغسيل تلقائيًا عن طريق معرفة كمية الغسيل ووزنه. حدد هذا الخيار لتجفيف الملابس القطنية. مثل السراويل القطنية والقمصان والملابس الداخلية القطنية. **Small (صغير)** - حدد هذه الدورة لتجفيف كمية صغيرة من الملابس (٤٠٠ جم تقريبًا). (ثلاث أو أربع مناشف أو سروال (زي مدرسي) أو قميصين بأكمام طويلة.) **Shirt (قميص)** - حدد هذه الدورة لتجفيف قميص أو سترة (زي مدرسي) في مدة قصيرة (١٩ دقيقة). **Low Temp (درجة حرارة منخفضة)** - يعمل هذا الخيار على تجفيف الملابس التي قد تتعرض للتلف في درجات الحرارة المرتفعة في درجات حرارة منخفضة. (الأقمشة المخلوطة والألياف الصناعية. مثل البوليستر والنيلون.) **Time Dry (مدة التجفيف)** - يعمل هذا الخيار على تجفيف الغسيل في الفترة الزمنية المحددة. • يجب تجنّب غسل الملابس التي قد لا يمكن تجفيفها؛ حيث إنها قد تتعرض للتلف حتى في درجات الحرارة المنخفضة. • تتعرف خيارات التجفيف Normal (عادي) وExtra (إضافي) وIron (كي) و Light Dry (تجفيف خفيف) على وزن الغسيل حتى يتم عرض وقت دقيق لعملية التجفيف وإجراء العملية بشكل كامل. • قد تختلف ظروف التجفيف باختلاف نوع الغسيل وحجمه.
١١ زر تحديد SOUND OFF (إيقاف تشغيل الصوت)	اضغط على هذا الزر لزيادة حجم صوت إشارة نهاية الدورة أو خفضه أو إيقاف تشغيله.
١٢ زر تحديد STOP&ADD (إيقاف وإضافة)	حدد هذا الخيار لإضافة غسيل أثناء تشغيل الغسالة (راجع Stop&Add (إيقاف وإضافة) في الصفحة).

WD0150VDX-02535G-01_AR.indd Sec5:23 2/14/2011 7:22:53 PM

غسل الملابس

١٣ زر LAST SETTING (الإعداد الأخير)	اختر الدورة المفضلة لديك، بما في ذلك درجة الحرارة والتنشيف والخيار، وما إلى ذلك.
١٤ الزر EXTRA WATER (ماء إضافي)	إذا ضغطت على الزر Extra Water (ماء إضافي)، يتم إضافة الماء قبل دورة الشطف. ويتم إجراء دورة الشطف بماء أكثر. لإلغاء هذه الوظيفة، اضغط على هذا الزر مرة أخرى. عند ذلك، ينطفئ الضوء ويتم إلغاء الوظيفة.
١٥ زر تحديد START/PAUSE (تشغيل/إيقاف مؤقت)	اضغط على هذا الزر لإيقاف الدورات مؤقتًا وإعادة تشغيلها.
١٦ الزر POWER (الطاقة)	اضغط على هذا الزر لتشغيل الغسالة، واضغط عليه ثانية لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق بينما تكون قيد التشغيل، يتم إيقاف تشغيلها تلقائيًا.

WD0150VDX-02535G-01_AR.indd Sec5:24 2/14/2011 7:22:54 PM

Child Lock (التأمين ضد عبث الأطفال)

تمكّنك وظيفة Child Lock (التأمين ضد عبث الأطفال) من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسل التي قمت باختيارها.

Activating/Deactivating (التنشيط /إلغاء التنشيط)

إذا كنت ترغب في تنشيط الوظيفة Child Lock (التأمين ضد عبث الأطفال) أو تعطيلها، اضغط على الزرين .**Temp (درجة الحرارة)** و**Rinse (شطف)** في نفس الوقت لمدة ٣ ثوانٍ. "ويضيء المؤشر Child Lock" (التأمين ضد عبث الأطفال) عند تشغيل هذه الميزة.

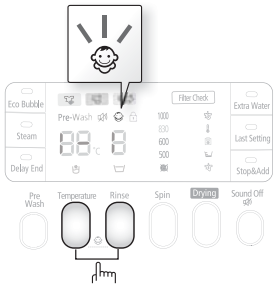

يمكن استخدام الزر **Power (تشغيل)** فقط عند تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال). يستمر تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) حتى بعد تشغيل الغسالة وإيقاف تشغيلها، أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

Sound off (إيقاف تشغيل الصوت)

يمكن تحديد الوظيفة Sound Off (إيقاف تشغيل الصوت) خلال جميع الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لجميع الدورات. وحتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

Activating/Deactivating (التنشيط /إلغاء التنشيط)

إذا كنت تريد تنشيط الوظيفة Sound Off (إيقاف تشغيل الصوت) أو تعطيلها، اضغط على الزرين **Spin (تنشيف)** و**Option (الخيار)** في نفس الوقت لمدة ٣ ثوانٍ. ستضيء العلامة "Sound Off (إيقاف تشغيل الصوت)" عند تنشيط هذه الميزة.

WD0150VDX-02535G-01_AR.indd Sec5:25 2/14/2011 7:22:54 PM

غسل الملابس

Delay End (نهاية التأجيل)

يمكنك ضبط الغسالة لإنهاء عملية الغسيل تلقائياً في وقت لاحق. وذلك باختيار تأجيل وقت الإنهاء حتى ٢٤ ساعة بحد أقصى (بزيادة قدرها ساعة واحدة عند الضغط على الزر في كل مرة). وتشير الساعة المعروضة إلى وقت الانتهاء من عملية الغسل.

١. يمكنك ضبط الغسالة تلقائيًا أو يدويًا حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر **Delay End (نهاية التأجيل)** بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**. عند ذلك، سيضيء المؤشر "Delay End (نهاية التأجيل)". وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.
٤. لإلغاء الوظيفة Delay End (نهاية التأجيل)، اضغط على الزر **Power (طاقة)**، ثم أعد تشغيل الغسالة مرة أخرى.

Stop&Add (إيقاف وإضافة)

لا يمكنك إضافة غسيل أثناء تشغيل الغسالة، وعندما يكون الباب مغلقًا. وعندما يكون المصباح Stop&Add (إيقاف وإضافة) مطفئًا، بل يمكنك فقط إضافة غسيل عندما يكون المصباح Stop&Add مضاءً.

١. اضغط على الزر Stop&Add (إيقاف وإضافة)،ستتوقف الغسالة عن العمل بشكل مؤقت تلقائيًا.
٢. انتظر حوالي 30 ثانية، ثم تحقق من حالة المصباح Stop&Add.
   - الوميض: يتم تصريف الماء الموجود في الغسالة للأسفل لمستوى الأمان حتى يمكن وضع كمية إضافية من الغسيل.
   - منطفئ: يمكن إضافة غسيل.
٣. أضف الغسيل.
٤. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).

- تجنب إضافة غسيل عند امتلاء الغسالة بالرغاوي أو الماء؛ حتى لا تتسرب الرغاوي أو الماء خارج الباب. تحقق من ذلك قبل فتح الباب.
- نوصي بتحديد الوظيفة Stop&Add (إيقاف وإضافة) قبل تشغيل أي دورة بخمس دقائق.
- إذا كانت درجة الحرارة الداخلية أعلى من ٥٥ درجة مئوية أثناء دورة الغسيل، أو ٧٠ درجة مئوية أثناء دورة التجفيف، فإنه لا يمكن تحديد الوظيفة Stop&Add (إيقاف وإضافة).

تحذير
- لا تفتح الباب بالقوة؛ حيث إن ذلك قد يعرّضك للإصابة أو يلحق ضررًا بالغسالة.

WD0150VDX-02535G-01_AR.indd Sec5:26 2/14/2011 7:22:55 PM

Eco Bubble (الفقاعات صديقة البيئة)

تسمح الميزة Eco Bubble (الفقاعات صديقة البيئة) بتوزيع المسحوق بالتساوي وتخلل الأنسجة بشكلٍ أسرع وأعمق.

الدورة	وظيفة الفقاعات	إلغاء وظيفة الفقاعات
Normal (عادي) وSoak (نقع) وTowels (المناشف) و Bedding (البطاطين) وBoil (غلي)	متوفرة	متوفرة
Wool/Lingerie (صوف/ملابس النساء الداخلية) و Quick Wash (الغسل السريع) و ECO Drum Clean (تنظيف الحاوية صديق البيئة)		غير متوفرة

- قد يتم تطبيق وظيفة فقاعات مختلفة حسب الدورة.

يتم تحديد الوظيفة Eco Bubble (الفقاعات صديقة البيئة) بشكل افتراضي. اضغط على هذا الزر مرة واحدة لإلغاء تحديد خيار الفقاعات. ثم اضغط عليه مرة أخرى لتحديد خيار الفقاعات.

١. افتح الباب وضع الغسيل داخل حوض الغسل. ثم أغلق الباب.
٢. اضغط على الزر **Power (تشغيل)**.
٣. حدد وظيفة.
٤. ضع كمية مناسبة من المسحوق ومنعّم الأقمشة داخل الحجيرات المناسبة وفقًا لكمية الملابس. ثم أغلق الدرج.
- أضف كمية مناسبة من المسحوق بحجيرة المسحوق ⓫. ثم أضف منعّم الأقمشة بحجيرة المنعّم ⊛ أدنى خط المستوى الأساسي لمنعّم الأقمشة (الحد أقصى) "A"
- عند تحديد الدورة Prewash (غسل أولي)، أضف المسحوق إلى حجيرة الغسل الأولي ① أيضًا.
- لاستخدام منظّف سائل، اترك علبة المنظف السائل بالدرج (راجع القسم "المنظف السائل" بالصفحة ٣٣).

لا تضف مسحوق تنظيف بدرج المنظّف السائل.

٥. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
- اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لبدء عملية الغسل.
- يتم التعرف على كمية الغسيل تلقائيًا ويتم غسل الملابس.
- بمجرد بدء تشغيل الغسالة، لا يمكنك إضافة وظيفة الفقاعات أو تحديدها.

- يتم تكوين الفقاعات حسب كمية المسحوق المحددة.
- الرجاء تنظيف مصفاة "المخلفات" باستمرار؛ حيث يساعد ذلك على تكوين فقاعات كافية.
- قد يتم امتصاص الفقاعات وتبدو أصغر حجمًا حسب المسحوق والملابس التي يتم غسلها.
- بالرغم من تكوين الفقاعات بمجرد بدء عملية الغسيل، فقد تستغرق عدة دقائق حتى يراها المستخدم.

WD0150VDX-02535G-01_AR.indd Sec5:27 2/14/2011 7:22:55 PM

غسل الملابس

الغسيل بالهواء

يمكن بواسطة الميزة Air Wash (الغسيل بالهواء) غسل الغسيل دون استخدام مياه بفضل نظام الهواء الفعّال بهذه الميزة. وتشمل الملابس التي يمكن غسلها بالهواء المعاطف الصوفية والسترات القطنية والسترات والبذلات. [قطعتان أو أقل (أقل من ١ كجم)]

١. افتح الباب وضع الملابس المراد غسلها في الغسالة، ثم أغلقه.
٢. اضغط على الزر Power (**تشغيل**).
٣. اختر Air Wash (**غسيل بالهواء**) عن طريق لف **قرص تحديد الدورة**.

الوضع	مدة الدورة
Deodorize (إزالة الروائح الكريهة)	٢٦ دقيقة
Sanitize (التعقيم)	٣٥ دقيقة
Dust Removal (إزالة الأتربة)	٤٠ دقيقة

- عند اختيار أحد هذه الخيارات، لا يمكن اختيار زر آخر. ويمكنك فقط اختيار وقت تأجيل الإنهاء من ساعة واحدة إلى ٢٤ ساعة.

٤. أغلق الباب واضغط على الزر Start/Pause (**تشغيل/إيقاف مؤقت**).

- لا يمكن تشغيل Air Wash (**غسيل بالهواء**) عند وجود ماء في الحوض. قم بتصريف الماء، واختر Air Wash (**غسيل بالهواء**).
- اضغط على الزر Start/Pause (**تشغيل/إيقاف مؤقت**) أو الزر Power (**طاقة**) لإزالة الغسيل.
- يمكن استخدام عطور أو أوراق مجففة مع برامج Air Wash (الغسيل بالهواء) لإضافة رائحة عطرية إلى الغسيل الذي تم تنظيفه (ورقة واحدة لقطعة ملابس أو قطعتين).

تجنب غسيل الملابس التالية بالوظيفة Air Wash (غسيل بالهواء):

- الملابس الحساسة المصنوعة من الجلد والمنك والفرو والحرير، إلخ.
- الملابس الداخلية المزّينة بشرائط على الأطراف ووسائد الدمى التي بها "غراء" والبذلات التي يمكن أن تفقد زينتها.
- قد تنكسر الأزرار الموجودة بالملابس.
- قد تتلف الملابس الغسولة بالنشاء.
- المفروشات الثقيلة، مثل الوسائد الخشبية (لراحة الرقبة)
  - الوسائد أو البطاطين المملوءة بالبلاستيك أو النشاء بدلاً من القطن.
  - البطاطين الكهربائية
- البطانيات الفرو
- البطانيات ثقيلة الوزن
- الوسائد المصنوعة من اللاتكس

WD0150VDX-02535G-01_AR.indd Sec5:28 2/14/2011 7:22:55 PM

استخدام دورة التجفيف

راجع ملصق سعة التجفيف وتأكد من أن يكون مستوى الملابس التي تضعها أدنى من المستوى المحدد للملابس المراد تجفيفها بالغسالة (٥,٠ كجم).

١. افتح باب الغسالة وضع الملابس، ثم أغلق الباب مرة أخرى.
٢. اضغط على الزر **Power (تشغيل)** ثم اضغط على الزر **Drying (تجفيف)**.: سيتم اختيار الدورة القياسية تلقائيًا.لا تتوفر وظيفة التجفيف للدورات Eco Drum Clean (تنظيف الحاوية صديق البيئة) وAir Wash (الغسيل بالهواء) وWool (صوف).
٣. حدد الزر **Drying (تجفيف)** كما يلي.

برامج التجفيف

- ستؤدي كل ضغطة على هذا الزر إلى اختيار نوع تنشيف بشكل متكرر بالترتيب التالي:**Cup Board (الخزانة)** ← **Small (صغير)** ← **Shirt (قميص)** ← **Low Temp (درجة حرارة منخفضة)** ← **Time Dry (مدة التجفيف)** ← **Cup Board (خزانة)** (٣٠ دقيقة ← ٦٠ دقيقة ← ٩٠ دقيقة ← ١٢٠ دقيقة ← ١٥٠ دقيقة)

نوع التجفيف		معلومات	الحمل الأقصى	المدة (الحمل الأقصى)
Auto Drying (التجفيف الآلي)	Cupboard ( ) (خزانة)	قياسي: تجفيف الملابس.	٥,٠ كجم	٢٤٠ دقيقة
	Small ( ) (صغير)	تجفيف ٣ أو ٤ مناشف أو قميصين	٠,٨ كجم	٤٠ دقيقة
	Shirt( ) (قميص)	تجفيف قميص واحد	٠,٣ كجم	٢٠ دقيقة
	Low Temp (درجة حرارة منخفضة) ( )	تجفيف الملابس عند درجة حرارة منخفضة لحماية أنسجتها.	٥,٠ كجم	٢٧٠ دقيقة
Time Drying ( ) (مدة التجفيف)		يمكنك تحديد مدة التجفيف الملائمة على أساس نوع القماش والكمية ونسبة الرطوبة.	-	١٥٠/١٢٠/٩٠/٦٠/٣٠ دقيقة.

- يتم عرض Drying Time (مدة التجفيف) تلقائيًا عن طريق استشعار وزن الملابس قبل التجفيف لزيادة تأثير التجفيف.
- **بالنسبة للغسيل الأقل من ٥,٠ كجم، استخدم الخاصية Auto Dry (التجفيف الآلي). أما بالنسبة للغسيل الذي يزن أكثر من ٥,٠ كجم، الرجاء استخدم الخاصية Time Dry (مدة التجفيف).**
- إذا تم تحديد كل من دورتيّ التنشيف والتجفيف، يتم تحديد سرعة التنشيف تلقائيًا لتعزيز كفاءة التجفيف.
- عند استخدام دورة التجفيف، تأكد من أن صمام التزوّد بالماء مفتوح.

٤. ضع مقدارًا ملائمًا من المسحوق ومنعّم الملابس في درج المسحوق، ثم أغلقه مرة أخرى.
٥. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**. : يتم إجراء تشغيل مثالي تلقائيًا، بدءًا من الغسيل وحتى التجفيف.
- لا يمكن تبديل الدورة المحددة بعد بدء التجفيف.
- في حالة عدم التزوّد بماء بارد، لا يتم إجراء التجفيف.
- إذا كنت تريد إجراء تجفيف بعد الغسيل باليد، حدد كلاً من Spin (تنشيف) وDry (تجفيف) في نفس الوقت.

WD0150VDX-02535G-01_AR.indd Sec5:29 2/14/2011 7:22:56 PM

غسل الملابس

غسل الملابس باستخدام قرص تحديد الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. وعند اختيار أحد برامج الغسل، تضبط الغسالة درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. افتح صنبور الماء.
٢. اضغط على الزر **Power (تشغيل)**.
٣. افتح الباب.
٤. ضع الملابس قطعة تلو الأخرى في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعّم الأقمشة ومسحوق الغسيل الأولي (عند الحاجة) في الأدراج المناسبة.

يتوفر خيار الغسل الأولي فقط في حالة اختيار الدورات Eco Bubble (الفقاعات صديقة البيئة) وNormal (عادي) وSoak (نقع) وTowels (المناشف) وBedding (البطاطين) وBoil (غلي). جدير بالذكر أن الغسل الأولي ضروري فقط في حالة اتساخ الملابس بشدة.

٧. استخدم Cycle Selector (قرص تحديد الدورة) لتحديد الدورة المناسبة وفقاً لنوع المادة: Eco Bubble (الفقاعات صديقة البيئة) و Normal (عادي) وSoak (نقع) وTowels (المناشف) وBedding (البطاطين) وBoil (غلي). سيضيء المؤشر المرتبط بكل دورة على لوحة التحكم.
٨. وفي هذا الوقت، يمكنك التحكم في درجة حرارة الغسيل وعدد دورات الشطف وسرعة التنشيف ووقت التأجيل عن طريق الضغط على زر الخيار المناسب.
٩. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) من Cycle Selector (قرص تحديد الدورة) وسوف تبدأ عملية الغسيل. عند ذلك، سيضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

الخيار Pause (إيقاف مؤقت)

١. من الممكن إضافة/إزالة قطع ملابس في غضون ٥ دقائق من بدء الغسل.
٢. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لإلغاء قفل الباب.
٣. لا يمكن فتح الباب عندما تكون درجة حرارة الماء HOT (مرتفعة) جدًا أو مستوى الماء HIGH (عالٍ) جدًا.
٤. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لإعادة تشغيل عملية الغسيل.

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل، يتم إيقاف الغسالة تلقائيًا.
١. افتح الباب.
٢. أخرج الغسيل من الغسالة.

WD0150VDX-02535G-01_AR.indd Sec5:30 2/14/2011 7:22:57 PM

غسل الملابس يدويًا

يمكنك غسل الملابس يدويًا دون استخدام Cycle Selector (قرص تحديد الدورة).

١. افتح صنبور الماء.
٢. اضغط على الزر **Power (تشغيل)** بالغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة تلو الأخرى في الحاوية دون تجاوز سعة الحاوية.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعّم أقمشة أو مسحوق غسيل أولي (عند الحاجة) في الأدراج المناسبة.
٧. اضغط على الزر **Temp (درجة الحرارة)** لتحديد درجة الحرارة المطلوبة. (ماء بارد أو ٣٠ درجة مئوية أو ٤٠ درجة مئوية أو ٦٠ درجة مئوية أو ٩٥ درجة مئوية)
٨. اضغط على الزر **Rinse (شطف)** لتحديد عدد دورات الشطف المطلوبة.
علمًا بأن الحد الأقصى لعدد دورات الشطف خمس دورات.
وتزداد مدة الغسل وفقًا لعدد الدورات.
٩. اضغط على الزر **Spin (تنشيف)** لتحديد سرعة النشيف.[:No Spin (دون تنشيف)]
١٠. اضغط على الزر **Delay End (نهاية التأجيل)** بشكل متكرر للتنقل بين خيارات Delay End (نهاية التأجيل) المتوفرة (من ٣ ساعات إلى ١٩ ساعة بزيادة قدرها ساعة واحدة عند الضغط على الزر في كل مرة). وتشير الساعة المعروضة إلى وقت الانتهاء من عملية الغسل.
١١. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لبدء دورة الغسيل بالغسالة.

إرشادات الغسيل

اتّبع هذه التعليمات البسيطة للحصول على ملابس ذات نظافة فائقة وغسيل مثالي.

تحقق دومًا من ملصق العناية الموجود بالملابس قبل غسلها.

قم بفرز الملابس وغسلها وفقًا للمعايير التالية:

- ملصق العناية: افرز الملابس إلى ملابس مصنوعة من القطن أو الألياف المختلطة أو الحرير أو الصوف أو الحرير الاصطناعي أو مواد اصطناعية.
- اللون: افصل الملابس البيضاء عن الملابس الملوّنة. واغسل الملابس الملوّنة الجديدة وحدها.
- الحجم: يعمل وضع الملابس بمختلف أحجامها معًا في مرة واحدة على تحسين عملية الغسل.
- الحساسية: اغسل الملابس الحساسة وحدها باستخدام الدورة Delicate (ملابس رقيقة) للملابس الصوفية والستائر والملابس الحريرية النقية والجديدة. تحقق من ملصقات العناية بالملابس التي تريد غسلها. أو راجع جدول العناية بالأقمشة الوارد في الملحق.

إفراغ الجيوب

أفرغ جميع جيوب الملابس قبل كل عملية غسيل؛ إذ قد تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة، مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق، في تلف الغسالة. لا تغسل الملابس التي ذات إزيمات أو أزرار كبيرة الحجم أو أشياء معدنية أخرى ثقيلة الوزن.

قد تتسبب المعادن الموجودة بالملابس في تلف الغسالة وتلف الحوض. اقلب الملابس التي بها أزرار أو الملابس المطرّزة قبل غسلها. وإذا تركت سحابات السراويل والسترات مفتوحة أثناء الغسل، فقد تتسبب في تلف سلة التنشيف. ولذا، يجب إغلاق السحابات وتثبيتها بخيط قبل الغسل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى، وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.

الغسل الأولي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة أفضل نتائج للغسيل. ومن ثمّ فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم الغسل الأولي بمسحوق غسيل يحتوي على بروتين.

WD0150VDX-02535G-01_AR.indd Sec5:31 2/14/2011 7:22:57 PM

غسل الملابس

تحديد السعة المناسبة

لا تتجاوز السعة المناسبة بالغسالة، حيث يؤدي ذلك إلى عدم الحصول على النظافة التي تريدها. استخدم الجدول التالي لتحديد السعة المناسبة لنوع الملابس التي تغسلها.

نوع القماش	السعة المناسبة
الطراز	WD0150
عادي - متوسط/خفيف الاتساخ - شديد الاتساخ	١٧,٠ كجم
المناشف	٥,٠ كجم
المفروشات	٣,٥ كجم
الصوف / ملابس النساء الداخلية	٤,٠ كجم

- في حالة عدم توازن الملابس ("بضيء UE" على الشاشة). وفي هذه الحالة، أعد توزيع الملابس،حيث يؤدي عدم توازن الملابس إلى تقليل فعالية دورة التنشيف.
- عند غسل مفروشات أو أغطية أسرّة، قد تطول مدة الغسيل أو تقل فعالية عملية التنشيف.

تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسيل (يتم شراؤها بشكل منفصل).

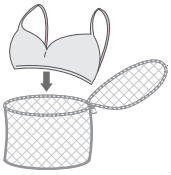

- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر مما يؤدي إلى تلف الغسيل. لذا، تأكد من وضعها داخل شبكة غسيل جيدة.
- قد تعلق الملابس الصغيرة والخفيفة بالباب، مثل الجوارب والقفازات والمنسوجات ومناديل اليد. لذا، ضعها داخل شبكة غسيل جيدة.

تنبيه: لا تغسل شبكة الغسيل وحدها دون وجود ملابس بها؛ حيث قد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة مما قد يتسبب خَرْك الغسالة من موضعها، فضلاً عن حدوث إصابات.

WD0150VDX-02535G-01_AR.indd Sec5:32 2/14/2011 7:22:57 PM

معلومات حول مسحوق الغسيل والمواد الإضافية

مسحوق الغسيل الذي يمكن استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الأنسجة الرقيقة أو الصوف)، والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دومًا مسحوق غسيل ذا "رغوة قليلة" مُصمم خصيصًا للغسالات الأوتوماتيكية.
اتّبع توصيات الشركة المصنّعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف درجة نقاء الماء في منطقتك، اتصل بالهيئة المحلية المسئولة عن الماء لديك لمعرفة ذلك.

لا تستخدم منظفًا صلبًا أو متجمّدًا لأنه قد يتراكم في دورة الشطف. كما أنه قد يتسبب في عدم تنفيذ دورة الشطف بشكل صحيح، أو يتسبب في إعاقة تدفق الماء.

الرجاء ملاحظة التعليمات التالية عند استخدام الدورة Wool (صوف):

- استخدم مسحوقًا سائلاً متعادلاً لغسيل الصوف فقط.
- قد يترك مسحوق غسيل أثرًا على الغسيل ويتسبب في تلف الصوف.

درج مسحوق الغسيل

تحتوي الغسالة على أدراج منفصلة لتوزيع المسحوق ومنعّم الأقمشة. أضف جميع مواد الغسيل الإضافية إلى الأدراج الخاصة بها قبل بدء تشغيل الغسالة.

لا تفتح درج مسحوق الغسيل عندما تكون الغسالة قيد التشغيل؛ حيث قد تتعرض لماء أو بخار ساخن.

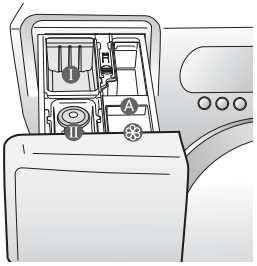

١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيسر من لوحة التحكم.
٢. أضفة الكمية الموصى بها من مسحوق الغسيل إلى حجيرة المسحوق Ⅱ مباشرةً قبل تشغيل الغسالة.
٣. أضف الكمية الموصى بها من منعّم الأقمشة في الحجيرة الخاصة به ❀ عند الحاجة. لا تتجاوز الخط MAX FILL (الحد الأقصى للتعبئة) (Ⓐ).
٤. عند استخدام خيار الغسيل الأولي، أضف الكمية الموصى بها من مسحوق الغسيل في حجيرة الغسيل الأولي Ⅰ.

لا تستخدم أنواع المساحيق التالية عند غسل الملابس كبيرة الحجم:

- مساحيق الغسيل التي على شكل ألواح أو أقراص
- المساحيق التي على شكل كرة أو شبكة

يجب إذابة منعّم الأقمشة المركّز أو السميك بقليل من الماء قبل صبّه في الموزع (لمنع إعاقة تدفق الماء).

WD0150VDX-02535G-01_AR.indd Sec5:33 2/14/2011 7:22:57 PM

تنظيف الغسالة وصيانتها

تنظيف الأسطح الخارجية

اقفل صنابير المياه بعد الانتهاء من غسيل اليوم.
يعمل ذلك على وقف تزويد الغسالة بالماء، كما يمنع حدوث تلف غير محتمل نتيجة لتسرب المياه. اترك الباب مفتوحًا حتى يجف الجزء الداخلي للغسالة.
استخدم قطعة قماش ناعمة لإزالة جميع مواد التنظيف والمبيّضات والمواد الأخرى.
نظّف الأجزاء التالية بالكيفية الموضّحة:
لوحة التحكم ـــ نظّفها بقطعة قماش ناعمة ورطبة. لا تستخدم المساحيق الكاشطة أو ورق التنظيف. لا ترش أي منظفات على اللوحة مباشرة.
الخزانة ـــ نظّفها بالماء والصابون.

تنظيف الأسطح الداخلية

نظّف الأسطح الداخلية للغسالة بشكل دوري لإزالة الأوساخ أو الفضلات أو الروائح الكريهة أو العفن أو الفطريات أو الفضلات البكتيرية التي قد تترسب داخل الغسالة بعد غسل الملابس.
قد يؤدي عدم الالتزام بهذه التعليمات إلى حدوث نتائج غير مرغوبة، مثل انبعاث روائح كريهة والتصاق بقع دائمة بالغسالة أو الملابس.
يمكنك إزالة رواسب الماء الساخن عند الحاجة. استخدم المنظفات ذات العلامة "تنظيف آمن".

تنظيف الموزّع

قد يحتاج الموزّع التلقائي إلى تنظيفه بشكل دوري نتيجة تراكم إضافات الغسيل.

١. أفرغ المسحوق السائل من درج المسحوق.
٢. أخرج غطاء فتحة التفريغ من درجيّ منعّم الأقمشة ومسحوق التبييض.
٣. اغسل جميع القطع بالماء الجاري.
٤. نظّف تجويف الموزّع بفرشاة ناعمة.
٥. أعد غطاء فتحة التفريغ إلى مكانه واضغط عليه حتى يستقر في مكانه.
٦. أعد الموزّع إلى مكانه.
٧. قم بتشغيل دورة **Rinse+Spin (شطف+تجفيف)** دون وجود أي ملابس في الغسالة.

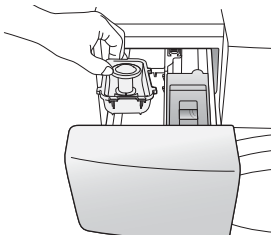

WD0150VDX-02535G-01_AR.indd Sec6:34 2/14/2011 7:22:58 PM

تخزين الغسالة

قد تتلف الغسالات في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين. قم بتجهيز الغسالة للتخزين كما يلي:

- حدد الدورة Quick Wash (غسيل سريع) وأضف مادة التبييض إلى الموزّع التلقائي. قم بتشغيل الغسالة باستخدام هذه الدورة دون وجود ملابس بها.
- أغلق صنابير الماء وافصل خراطيم التزوّد بالماء.
- افصل الغسالة عن مأخذ التيار الكهربي. واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.
- في حالة تخزين الغسالة في درجات حرارة تحت درجات التجمد. اترك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها.

تنظيف مصفاة المخلفات

نوصي بتنظيف مصفاة المخلفات عند عدم تصريف الماء جيدًا أو عند عرض رسالة الخطأ "ND".

١. افتح غطاء المصفاة بالضغط على مقبض الغطاء وسحبه بأصابعك.

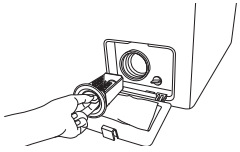

٢. قم بفك غطاء فتحة التفريغ عن طريق إدارته عكس اتجاه عقارب الساعة.

٣. امسك الغطاء الموجودة في نهاية أنبوب التصريف واسحبه للخارج ببطء بمقدار ٦ بوصات (١٥ سم) وقم بتصريف المياه.

٤. أخرج غطاء مصفاة المخلفات من مكانه.

٥. اغسل أي أوساخ أو أي مواد أخرى عالقة في مصفاة المخلفات. تأكد من أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.

٦. ضع غطاء مصفاة المخلفات في مكانه.

٧. أعد غطاء المصفاة إلى مكانه.

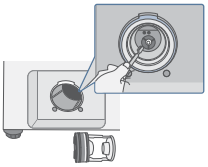

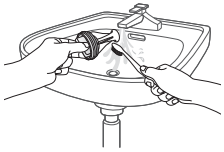

WD0150VDX-02535G-01_AR.indd Sec6:35 2/14/2011 7:22:58 PM

تنظيف الغسالة وصيانتها

تنظيف حاجز الباب

١. افتح باب الغسالة وأخرج أي أقمشة أو ملابس منها.

٢. تحقق مما إذا كانت هناك أي مناطق متسخة على الحاجز الرمادي بين فتحة الباب والسلة. اسحب الحاجز لفحص جميع المناطق تحته وللتحقق من عدم وجود أشياء غريبة.

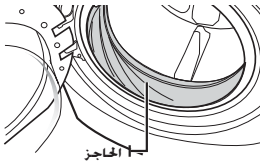

٣. في حالة وجود مناطق متسخة، امسح هذه المناطق من الحاجز عن طريق القيام بما يلي:

أ) اخلط محلول تخفيف باستخدام ¾فنجان (١٧٧ ملليلتر) من سائل الكلور المبيّض وغالون (٣,٨ لتر) من ماء الصنبور الدافئ.

ب) امسح منطقة الحاجز بمحلول التخفيف، باستخدام قطعة قماش رطبة.

ج) اتركه قائمًا لمدة ٥ دقائق.

د) امسح الجزء السفلي بالكامل بقطعة قماش جافة، واترك الغسالة لتجف بالهواء مع ترك الباب مفتوحًا.

مهم:

- ارتد قفازات مطاطية عند التنظيف لمدد طويلة.
- راجع تعليمات الجهة المصنّعة للمادة المبيّضة للاستخدام الصحيح.

الحفاظ على الغطاء العلوي والإطار الأمامي

لا تضع أية أشياء ثقيلة أو حادة أو علبة المنظف فوق الغسالة. بل احفظها بالقاعدة التي اشتريتها أو في صندوق تخزين منفصل؛ حيث قد تتسبب تلك الأشياء في خدش الغطاء العلوي من الغسالة أو إتلافه.

نظرًا لأن الغسالة بكاملها عالية اللمعة، يمكن أن يتعرّض سطحها للخدش أو التلف. ولذلك، حاول تجنب خدش السطح أو إتلافه عند استخدام الغسالة.

WD0150VDX-02535G-01_AR.indd Sec6:36 2/14/2011 7:22:59 PM

استكشاف المشاكل وحلها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
لاتعمل..	• تأكد من إغلاق الباب بإحكام. • تأكد من توصيل قابس الغسالة بمصدر التيار الكهربي. • تأكد من أن صنابير المياه مفتوحة. • تأكد من الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لتشغيل الغسالة. • تأكد من إلغاء تنشيط الوظيفة Child Lock (التأمين ضد عبث الأطفال). راجع الصفحة ٢٥. • قبل أن تبدأ الغسالة في ملء الماء، ستقوم بسلسلة من أصوات النقر للتحقق من إغلاق الباب والتصريف بسرعة. • افحص المنصهر أو أعد تشغيل قاطع الدائرة الكهربية
لا تحتوي على ماء أو لا يوجد ماء كاف بها..	• افتح كلا الصنبورين بشكل كامل. • تأكد من إغلاق الباب بإحكام. • فك ثنيات خراطيم التزوّد بالماء. • افصل الخراطيم ونظّف الحواجز؛ فقد تكون حواجز المصفاة مسدودة. • افتح الباب ثم أغلقه، واضغط على الزر Start / Pause (تشغيل/إيقاف مؤقت).
تحتوي على مسحوق متبقي في الموزّع التلقائي بعد انتهاء دورة الغسيل.	• تأكد من تشغيل الغسالة بضغط ماء كافٍ. • تأكد من أن "قرص تحديد المسحوق" في الوضع العلوي عند استخدام مسحوق حُبيبي.
تهتز أو تحدث صوتًا مرتفعًا.	• تأكد من تركيب الغسالة على سطح مستو. إذا كانت الأرض غير مستوية، اضبط قائم الغسالة حتى تستقر في موضعها. • تأكد من فك مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توازن الملابس الموجودة في الغسالة.
تتوقف	• قم بتوصيل سلك التيار الكهربي بمنفذ تيار كهربي مباشر. • افحص المنصهر أو أعد تشغيل قاطع الدائرة الكهربية. • أغلق الباب ثم اضغط على الزر Start / Pause (تشغيل/إيقاف مؤقت).من أجل سلامتك، لن تدور الغسالة أو تقوم بالتجفيف إلا إذا كان الباب مغلقًا. • قبل أن تبدأ الغسالة في ملء الماء، ستقوم بسلسلة من أصوات النقر للتحقق من إغلاق الباب والتصريف بسرعة. • وقد تكون هناك فترة توقف أو نقع أثناء الدورة. انتظر قليلاً. فقد تبدأ العمل. • تحقق من عدم وجود عوائق في الحواجز الموجودة في الخراطيم وصنابير المياه.ونظّف الحواجز بشكل دوري.
تمتلئ الغسالة بماء بدرجة حرارة خاطئة.	• افتح كلا الصنبورين بشكل كامل. • تأكد من تحديد درجة الحرارة بشكل صحيح. • تأكد من توصيل الخراطيم بالصنابير الصحيحة.وتأكد من دفق الماء بالخراطيم. • افحص سخّان الماء. ينبغي ضبطه لتوفير مياه ساخنة بدرجة حرارة ١٢٠ درجة فهرنهايت (٤٩ درجة مئوية) على الأقل في الصنبور. وافحص أيضًا سعة سخان الماء ومعدل الاسترداد. • افصل الخراطيم ونظّف الحواجز؛ فقد تكون حواجز المصفاة مسدودة. • أثناء ملء الغسالة، قد تتغير درجة حرارة المياه نظرًا لأن ميزة التحكم التلقائي في درجة الحرارة التلقائية تتحقق من درجة حرارة الماء الوارد. وهذا أمر طبيعي. • أثناء ملء الغسالة، قد تلاحظ مرور الماء الساخن و / أو الماء البارد فقط من خلال الموزّع عند تحديد درجة حرارة الماء البارد أو الدافئ، وهذه وظيفة طبيعية لميزة التحكم التلقائي في درجة الحرارة نظرًا لأن الغسالة تقوم بتحديد درجة حرارة المياه.
باب الغسالة مغلق أو لا يمكن فتحه.	• اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لإيقاف الغسالة. • سيظل باب الغسالة مغلقًا أثناء فترة التسخين بالدورة Sanitize (التعقيم) • قد يستغرق الأمر دقائق قليلة حتى تتحرر آلية قفل الباب.

WD0150VDX-02535G-01_AR.indd Sec11:37 2/14/2011 7:22:59 PM

استكشاف المشاكل وحلها ورموز المعلومات

المشكلة	الحل
لا تقوم بالتصريف و/أو التنشيف.	• افحص المنصهر أو أعد تشغيل قاطع الدائرة الكهربية. • فك ثنيات خراطيم التصريف. وتجنب استخدام الخراطيم الملتوية. إذا كانت هناك مشكلة تتعلق بالتصريف. اتصل بالصيانة. • أغلق الباب واضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت). من أجل سلامتك، لن تدور الغسالة أو تقوم بالتنشيف إلا إذا كان الباب مغلقًا. • تأكد أن مصفاة المخلفات غير مسدودة.
تظل الملابس مبتلة جدًا في نهاية الدورة.	• استخدم السرعة "عالية" أو "عالية جدًا" للتنشيف. • استخدم مسحوقًا ذا فاعلية عالية لتقليل الرغوة الزائدة. • الأشياء المراد غسلها بالغسالة قليلة جدًا. قد تكون الأشياء القليلة جدًا (قطعة واحدة أو اثنتين) غير متوازنة ولا يتم تجفيفها بالكامل.
تسرب المياه.	• تأكد من إغلاق الباب بإحكام. • تأكد من إحكام جميع وصلات الخراطيم. • تأكد من إدخال طرف خرطوم التصريف وإحكامه بشكل صحيح في نظام التصريف. • تجنب التحميل الزائد. • استخدم مسحوقًا ذا فاعلية عالية لمنع الرغوة الزائدة.
تحتوي على رغوة زائدة.	• استخدم مسحوقًا ذا فاعلية عالية لمنع الرغوة الزائدة. • قلل كمية المسحوق عند استخدام ماء ساخن أو أحمال ملابس صغيرة أو خفيفة الانساخ. • لا يفضل استخدام غير المساحيق ذات الفاعلية العالية.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

WD0150VDX-02535G-01_AR.indd Sec11:38 2/14/2011 7:22:59 PM

رموز المعلومات

في حالة تعرض الغسالة لأعطال، قد يظهر أحد رموز المعلومات على لوحة العرض. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول ومحاولة إجراء الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	• أغلق الباب.
4E	• تأكد من أن صنبور التزوّد بالماء مفتوح. • افحص ضغط الماء.
5E	• نظّف المصفاة من المُخلفات. • تأكد من تركيب خرطوم التصريف بشكل صحيح.
UE	• وزن الملابس بالغسالة غير متوازن. أعدة توزيع الملابس بالغسالة. في حالة غسيل قطعة واحدة من الملابس، مثل رداء حمام أو جينز، قد لا تكون نتيجة التجفيف النهائية مرضية وتظهر رسالة الخطأ "UE" في إطار العرض.
cE/3E	• اتصل بمركز خدمة ما بعد البيع.
Hot (مرتفعة)	• تظهر عندما تكون درجة الحرارة الداخلية في الحاوية مرتفعة. ستعمل المروحة تلقائيًا. لذ انتظر حتى تختفي العلامة "Hot" (مرتفعة).

بالنسبة للرموز التي لم تذكر أعلاه، أو إذا لم يعمل الحل المقترح على حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لـ Samsung.

WD0150VDX-02535G-01_AR.indd Sec11:39 2/14/2011 7:22:59 PM

جـدول الـدورات

جـدول الـدورات

(●اختيار المستخدم)

البرنامج	درجة الحرارة (بالدرجة المئوية)					الفقاعات				عدد الدورات في الدقيقة لسرعة التنشيف (القصوى)				
	بارد	٣٠	٤٠	٦٠	٩٥	دون فقاعات	عادي	سريع	سريع جدًا	دون تجفيف	٥٠٠	٦٠٠	٨٣٠	١٠٠٠
Quick Wash (الغسل السريع)	●	●	●						●	●	●	●	●	●
Normal (عادي)	●	●	●	●		●	●	●	●	●	●	●	●	●
Soak (نقع)	●	●	●	●		●	●	●	●	●	●	●	●	●
Wool/Lingerie (صوف/ملابس النساء الداخلية)	●	●	●						●	●	●	●		
Towels (المناشف)	●	●	●	●	●	●	●	●	●	●	●	●	●	
Bedding (المفروشات)	●	●	●			●			●	●	●	●	●	
Boil (غلي)					●	●			●	●	●	●	●	●
Eco Drum Clean (تنظيف الحاوية صديق البيئة)			●			●					●			

البرنامج	Drying (تجفيف)	Pre-Wash (الغسيل الأولي)	Steam (التنظيف بالبخار)	Delay End (نهاية التأجيل)	Stop&Add (إيقاف وإضافة)	عرض الوقت (بالدقيقة)
Quick Wash (الغسل السريع)	●		●	●	●	٠:٤٨
Normal (عادي)	●	●	●	●	●	١:٠٩
Soak (نقع)	●	●	●	●	●	١:٣٨
Wool/Lingerie (صوف/ملابس النساء الداخلية)			●	●	●	٠:٤٦
Towels (المناشف)	●	●	●	●	●	١:٥٨
Bedding (المفروشات)		●	●	●	●	٢:٠٣
Boil (غلي)	●	●	●	●	●	٢:١٨
Eco Drum Clean (تنظيف الحاوية صديق البيئة)			●	●		١:٤٨

١. تستغرق الدورة ذات الغسيل الأولي مدة أطول بحوالي ١٥ دقيقة.

٢. تم قياس بيانات مدد الدورات وفقًا للشروط المنصوص عليها في المقياس IEC 60456 / EN 60456.

٣. قد تختلف مدة الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة حرارة الماء وكمية الغسيل ونوعه.

WD0150VDX-02535G-01_AR.indd Sec7:40 2/14/2011 7:22:59 PM

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وتجفيف وكي (وتنظيف جاف عند الحاجة). يضمن استخدام هذه الرموز التناسق بين الشركات المصنّعة للملابس المحلية والمستوردة. اتّبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

مواد مقاومة		يمكن الكي عند ١٠٠ درجة مئوية كحد أقصى	
الملابس الرقيقة		ممنوع الكي	
يمكن الغسيل عند ٩٥ درجة مئوية	95 95	يمكن إجراء تنظيف جاف باستخدام أي مواد مذيبة	A
يمكن الغسيل عند ٦٠ درجة مئوية	60 60	التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R113 فقط	P
يمكن الغسل عند ٤٠ درجة مئوية	40 40	التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط	F
يمكن الغسيل عند ٣٠ درجة مئوية	30 30	ممنوع استخدام التنظيف الجاف	
يمكن غسلها باليد		تجفف وهي مفرودة	
تنظيف جاف فقط		يمكن تعليقها لتجف	
يمكن استخدام مادة تبييض مع الماء البارد	Cl	تجفيف الملابس وهي معلقة على حمالة	
يحظر استخدام مادة تبييض		تجفيف بالتدوير. حرارة عادية	
يمكن الكي عند ٢٠٠ درجة مئوية كحد أقصى		تجفيف بالتدوير. حرارة خفيفة	
يمكن الكي عند ١٥٠ درجة مئوية كحد أقصى		يحظر تجفيفها بالتدوير	

حماية البيئة

- **هذا الجهاز مصنوع من مواد قابلة لإعادة التصنيع. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. واخلع الباب كي لا يعلق أي حيوانات أليفة أو أطفال داخل الجهاز.**
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع والمبيضات قبل دورة الغسيل عند الحاجة فقط.
- وفّر الماء والكهرباء من خلال غسيل أحمال ملابس كاملة فقط (تختلف الكمية وفقًا للبرنامج المستخدم).

بيان التوافق

يتوافق هذا الجهاز مع معايير السلامة الأوروبية (EN Standard 60335 وEC directive 93/68).

WD0150VDX-02535G-01_AR.indd Sec3:41 2/14/2011 7:22:59 PM

الملحق

المواصفات

النوع			غسالة أمامية التحميل	
الأبعاد			WD0150	
			العرض ٦٨١ م X العمق ٨١١ م X الارتفاع ٩٩١ م	
ضغط الماء			١٣٧ كيلو باسكال إلى ٨٠٠ كيلو باسكال	
كمية الماء			٥٦ لتر	
الوزن الصافي			WD0150	
			١٠٧ كجم	
سعة الغسل والتنشيف			١٧.٠ كجم [غسيل جاف]	
سعة التجفيف			٩.٠ كجم	
استهلاك الطاقة		الطراز	WD0150	
		الغسل	٢٢٠ فولت	٢٥٠ واط
		الغسل والتسخين	٢٢٠ فولت	٢٢٠٠ واط
		التجفيف	٢٢٠ فولت	٢٢٠٠ واط
	التنشيف	الطراز	WD0150	
		٢٢٠ فولت	٦٠٠ واط	
		الضخ	٨٠ واط	
وزن العبوة		الطراز	WD0150	
		الغلاف الورقي	٥.٠ كجم	
		الغلاف البلاستيكي	١.٨ كجم	
دورات التنشيف		الطراز	WD0150	
		دورة في الدقيقة	١٠٠٠	

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

WD0150VDX-02535G-01_AR.indd Sec3:42 2/14/2011 7:23:01 PM

مذكرة

هل لديك أي أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

كود رقم DC68-02535G-01_AR

WD0150VDX-02535G-01_AR.indd Sec3:44 2/14/2011 7:23:01 PM